System BIOS Update SOP for Linux

Date: Aug, 2009


This document contains proprietary technical information, which is the property of the Acer Incorporated and shall not be disclosed to others in whole or in part, reproduced, copied, or used as the basis for design, manufacturing, or sale of apparatus without written permission of Acer Incorporated.
The information in this document, including products and software versions, is current as of the Release Date above. This document is subject to change without notice.

In [DOS Mode]

1.1 Power on System and Boot to DOS
1.2 Key in 'cd dostool' (Go to BIOS path like "A:\DOSTOOL")
1.3 Key in 'flash2M.bat' or 'flash2M'



1.4 Press <Enter> and start to flash System BIOS

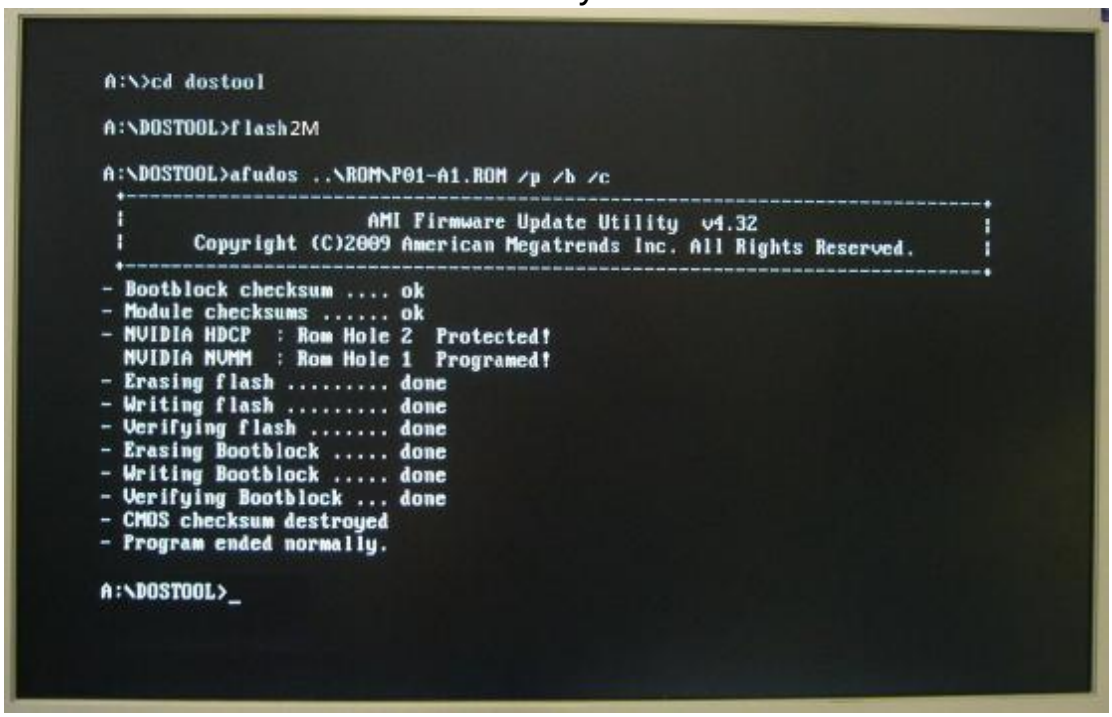

1.5 Reboot system and Press <Del> to enter BIOS setup menu.
1.6 Load default setting, and Save & Exit.