
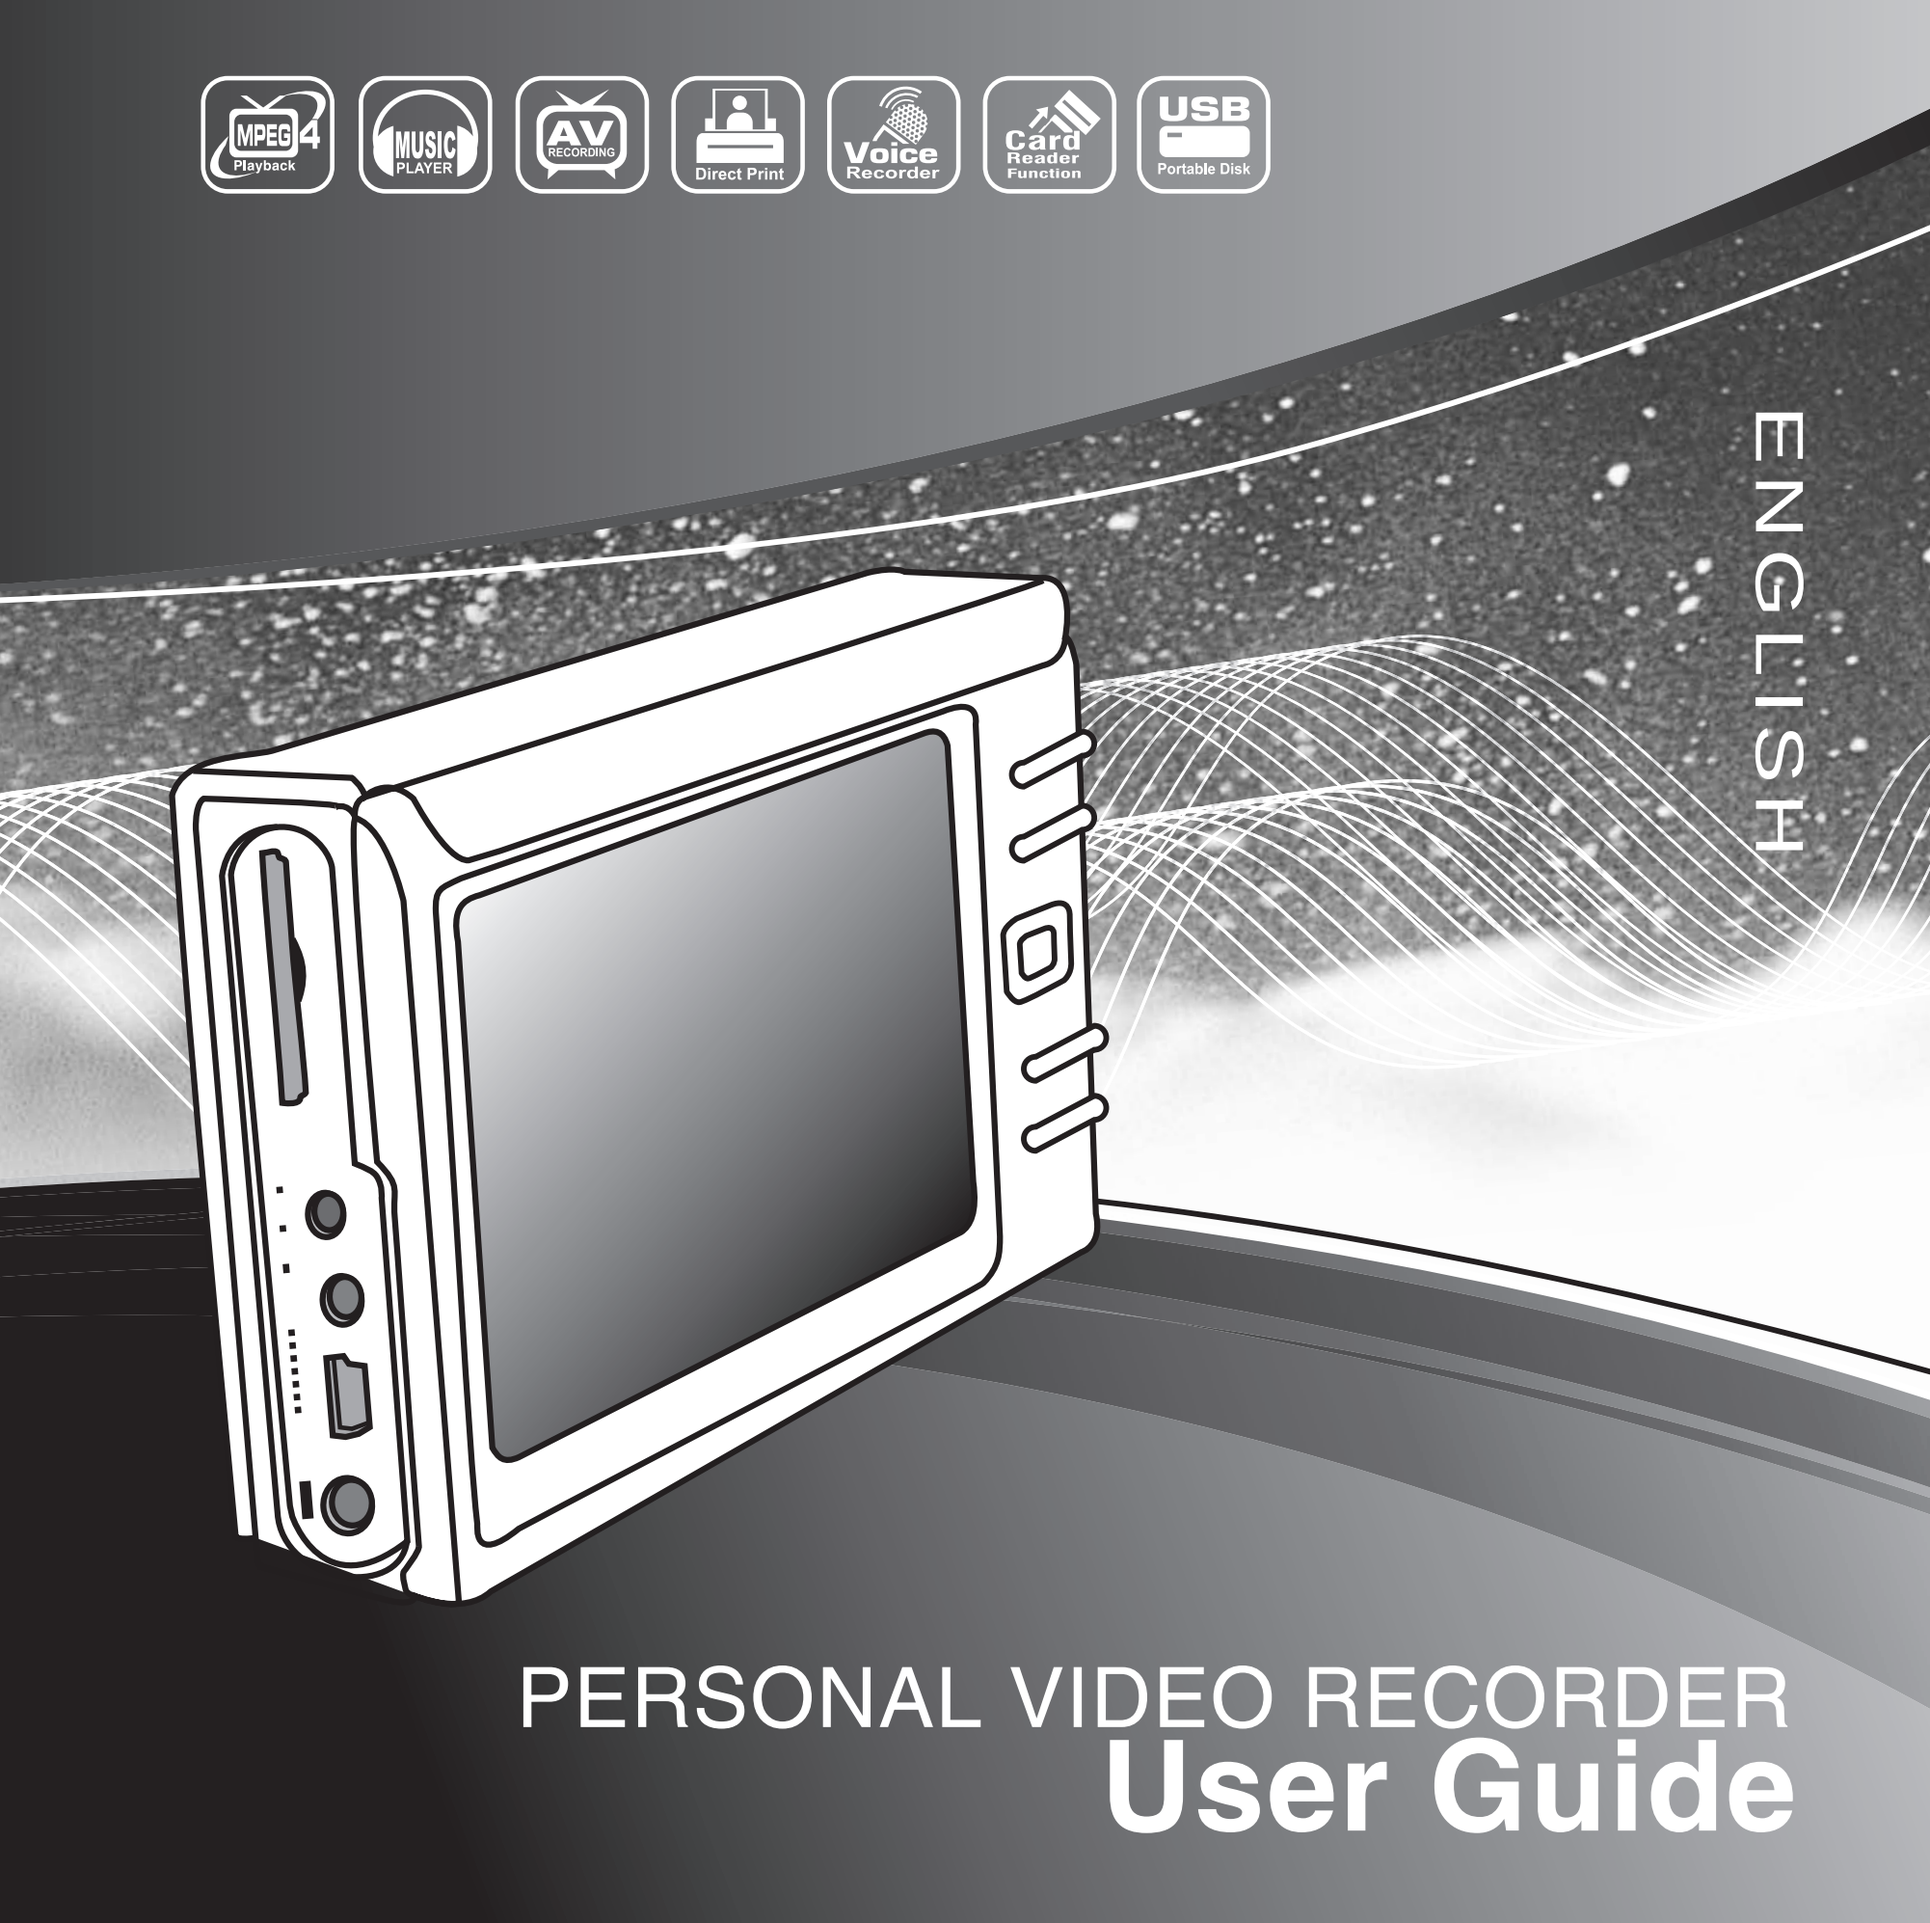



PERSONAL VIDEO RECORDER

User Guide


SAFETY INSTRUCTION

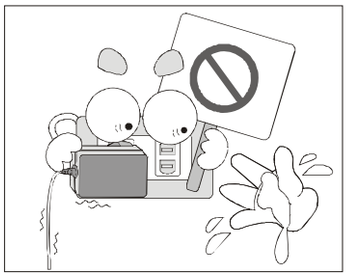


Do not plug/unplug the power cord with wet hands.

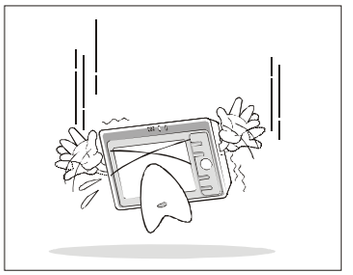


Do not drop the device. Handle with care.

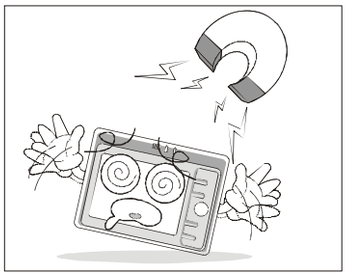


Keep away from magnetic sources.

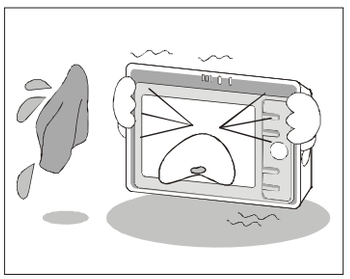


Do not clean the device with wet cloth. Use only dry and soft cloth.

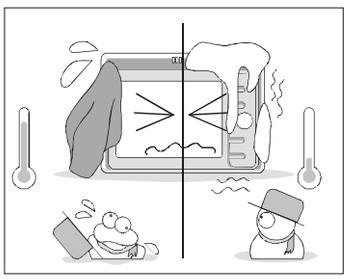


Do not keep the device in low temperature or high humidity.

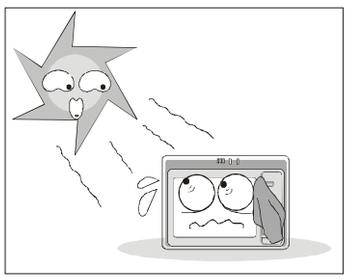


Do not expose to direct sunlight or extreme heat.

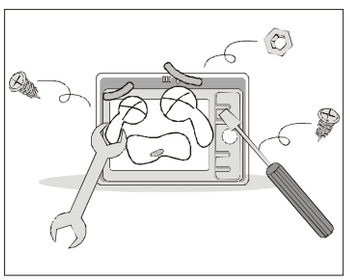

Do not try to disas-semble or repair the device.

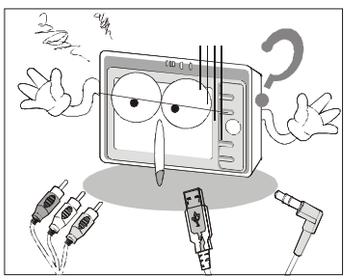

Connect the cables correctly.

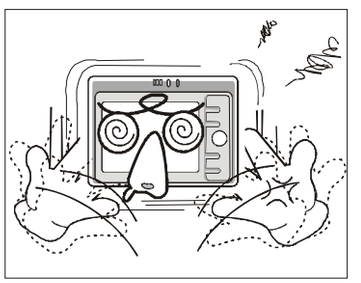

Do not shake the device violently while operating.

Important Battery Information

- The battery used in this device may present a risk of fire or chemical burn if mistreated.
- Do not separately recharge, disassemble, heat above 60°C (140°F), or incinerate.
- Use only the supplied charger. Use of a different charger may present a risk of fire or explosion.
- Keep charger plugged into device for at least 3.5 hours before attempting to operate for the first time use.
- Keep the unit away from children.


Copyright Caution

- Copyrighted materials, works of art, and/or presentations may require authorization to be fully or partially recorded.
- Please be aware of all such applicable laws concerning the recording and use of such for your country and jurisdiction.

Battery Charge

Please charge the battery for a minimum of 3.5 hours before initial use.

1. Plug one end of the power adapter to the DC IN jack of the PVR and the other end to the appropriate wall plug.
2. The red recharge indicator will light up.
3. When the battery is fully charged, the indicator light will turn off.

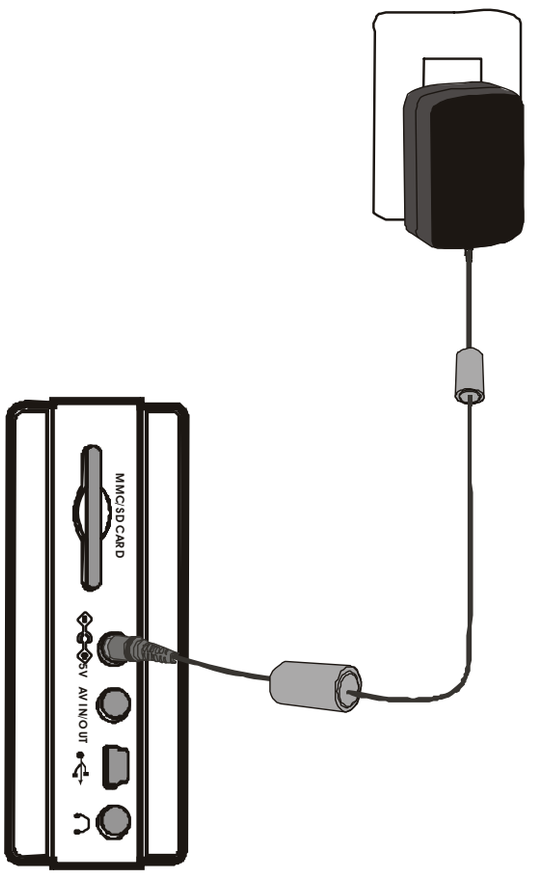


Date and Time Set Up


To display the correct date and time, please do the following:



1. Select **Calendar** in the main menu.
2. Press **MENU** button.
3. Select  from the menu and press ▶ button to select **DATE.** Press ▶ button again to enter.

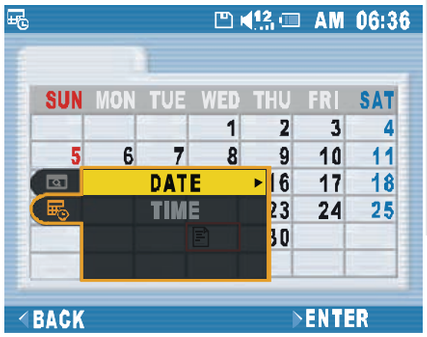

4. Press ⏯ to highlight **YEAR** and press ▲ / ▼ buttons to change. Press ⏯ button to confirm and continue.
5. Press ▲ / ▼ buttons to set up the month and press ⏯ button to confirm and continue.

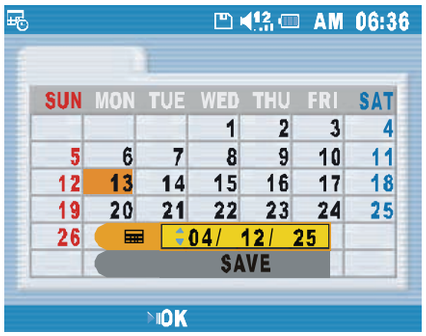

6. Press ▲ / ▼ buttons to set up the day and press ⏯ button to confirm.
7. When the above settings are done, press ⏯ to save.

Note: The default date format is YY/MM/DD. To change the format, go to **SETUP Menu**.

Table of Contents

SAFETY INSTRUCTION II

IMPORTANT BATTERY INFORMATION III

COPYRIGHT CAUTION III

BATTERY RECHARGE IV

DATE&TIME SET UP V

OVERVIEW 1

SOFTWARE INSTALLATION 4

CONNECTING TO PC 6

Converting and Transferring Files 6

PVR Console 9

BASIC FUNCTIONS 10

Photo Player 10

Photo Playback 10

Zoom 11

Record Message to a Photo 12


Playback/Delete the Message Attached to a Photo 13

Slide Show Playback 15
Effects 16
Memory Mix 17
Video Player 19
Video Playback 19
Audio Player 21
Audio Playback 21
Record Audio 22
Repeat Playback 23
Music Player 27
Music Playback 27
Voice Alarm 28
AV Center 30
Record Videos from TV to Your PVR 30
Record Videos from DVD to Your PVR 33
Timer Record 35

File Browser 37
Sort 38
Rename 39
Create New Folder 40
Calendar 42
Import from Outlook 2000 43
Import from e-Life Pal 45
Game 48
OTHER FUNCTIONS 49
PVR Console 49
Change the Startup Screen 49
Change the Startup Sound & Button Sound 51
DPS Menu 53
DPS 53
How to Print 54

OSD Menu 59
Photo Player Menu 59
Video Player Menu 61
Audio Player Menu 62
Music Player Menu 63
AV Center Menu 65
File Browser Menu 66
Calendar Menu 68
Setup Menu 69
Specifications 70

OVERVIEW

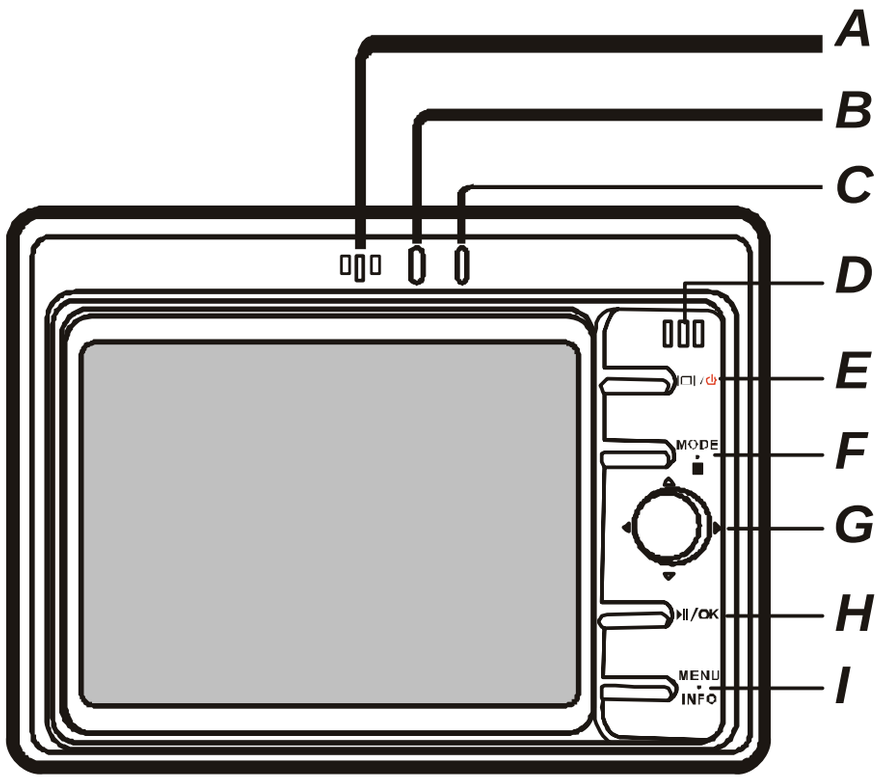

A. Microphone

B. Power indicator

C. Recharge indicator

D. Speaker

E. LCD / Power button

Press to turn on/off LCD Display.

Press and hold 3 secs to power on/off.

F. Mode / Stop button

G. Joystick


H. Play / OK button

I. Menu / Info button


Press to open/close Menu.

Press and hold 3 secs to turn on/off Info.

Directional Buttons

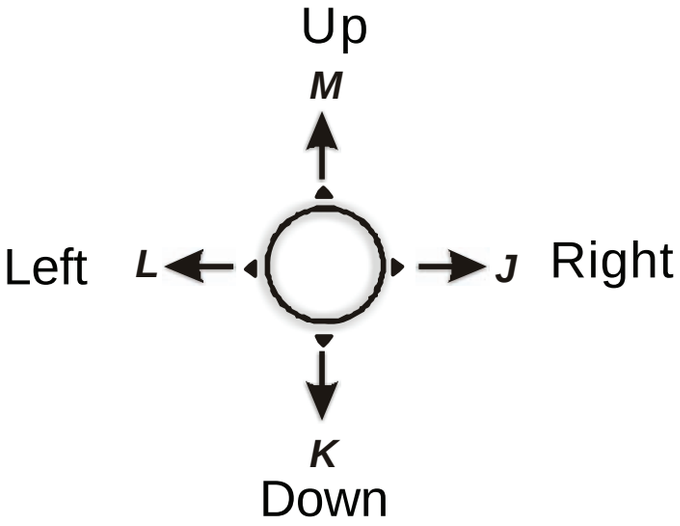

ENGLISH

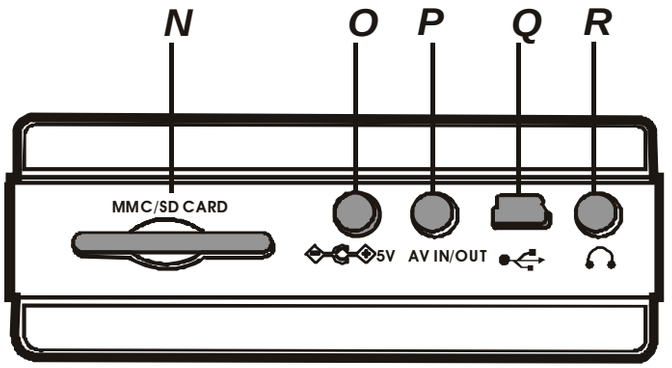

N. MMC/SD Card slot


O. DC IN jack

P. AV IN/OUT jack

Q. USB jack

R. Earphone jack

S. Reset
Press the button to shut down the device. To power on, press POWER button.

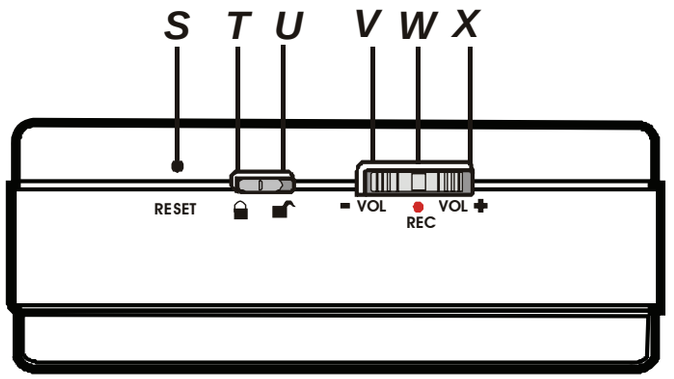


T. Lock
Slide the switch to the position to lock the device.

U. Unlock
Slide the switch to the position to release the lock of the device.

V. Volume-down
Scroll down to decrease the volume.


W. Record

X. Volume-up
Scroll up to increase the volume.

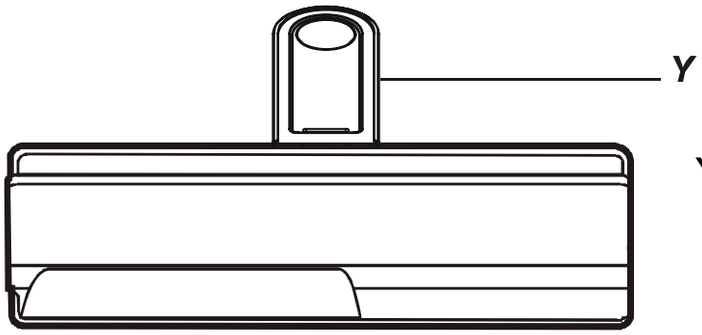


Y. Stand


Set Up the Stand

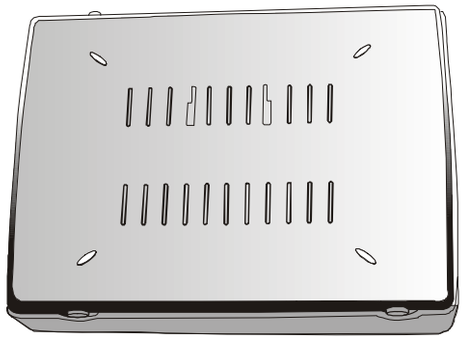

Turn over the PVR

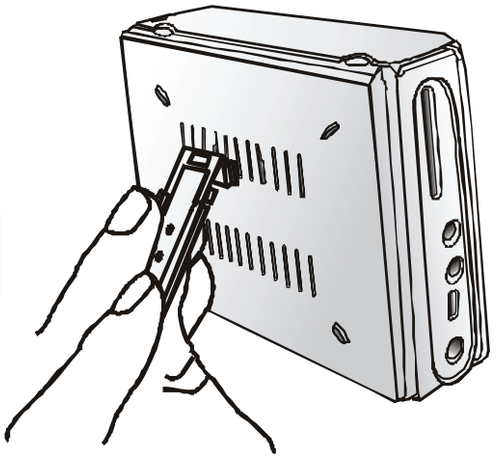


Attach stand to the back of PVR

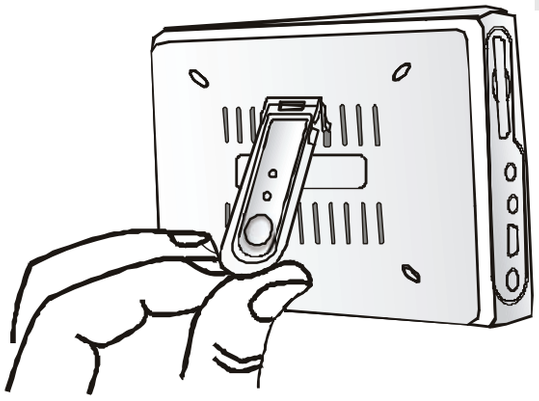



Pull down the stand and fasten tight

Software Installation


The bundled CD contains many useful PVR tools. Follow the instructions below to complete the installation.

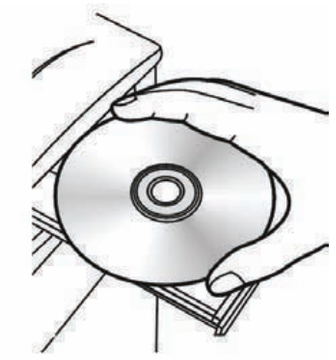


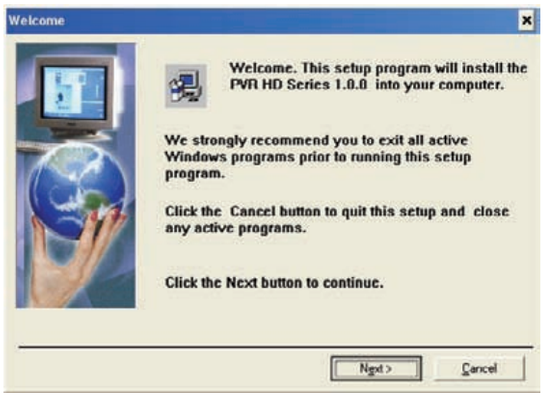

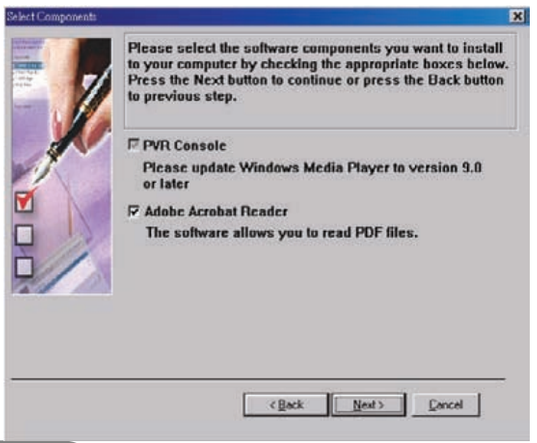

1. Insert the Installation CD into CD-ROM. The **Select Language** dialog box appears.
2. Select your preferred language and click "***OK***" to continue.
3. A **Welcome** dialog box appears. Click "***Next***".
4. The **Select Components** dialog box appears. Click and select the software you want to install and then click "***Next***".

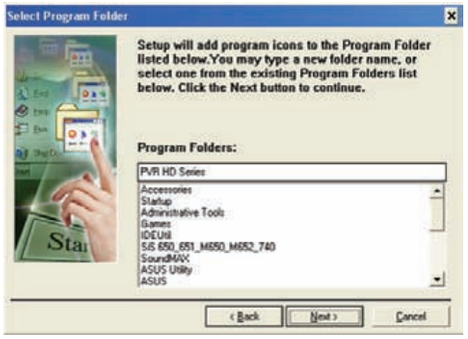

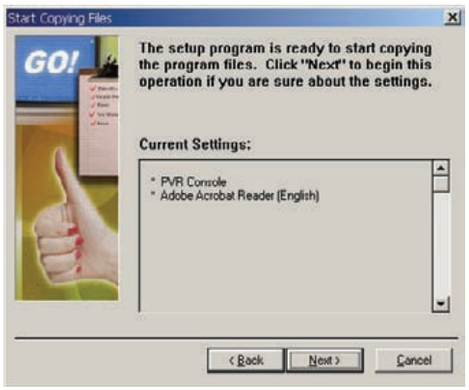



5. The **Select Program Folder** dialog box appears. You can change the folder name listed in the text box, or simply click *"**Next**"* to continue.

6. The **Start Copying Files** dialog box appears confirming that the listed software will be installed. Click *"**Next**"* to continue.


7. Follow the on-screen instructions to continue and complete the installation.

8. When the installation is complete, the icon will be displayed on the Windows taskbar.

Connecting to PC

Converting and Transferring Files

1. Power on the PVR and connect it to the computer with the provided USB cable.

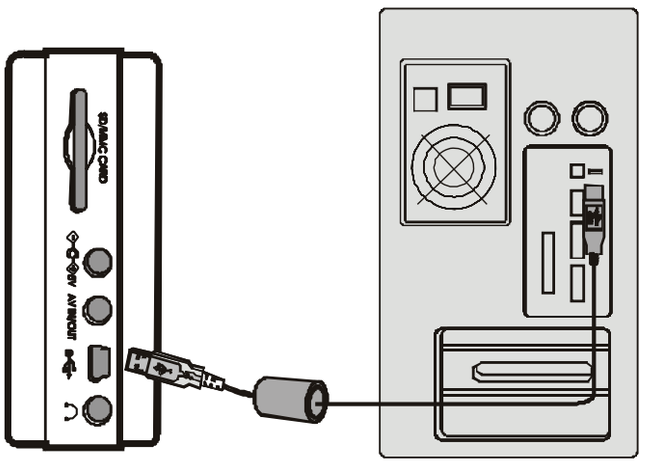


2. A mode switch screen appears.





Then **PVR Console** (Refer to Page 9 for more information) appears.

3. Click on the  icon to open **MediaConverter** application. The following appears.

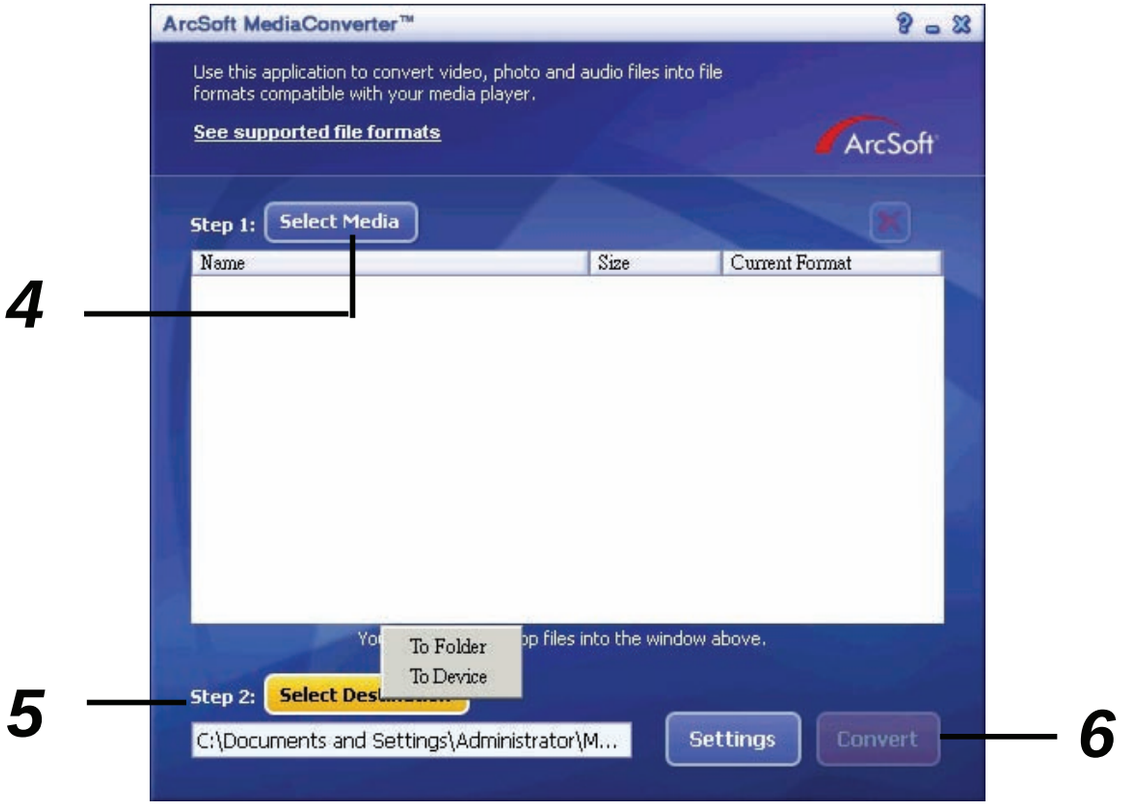

4. Click the **Select Media** button to choose the files you want to convert.

5. Click the **Select Destination** button and choose the destination where the converted files will be uploaded to.


6. Click the **Convert** button to start the conversion.

Note: Use only **MediaConverter** to convert and transfer video files to PVR. Videos can come from a variety of different sources and in a number of different formats. However, **MediaConverter** does not support all video formats or codecs.

MediaConverter™ Supported File Type	
File Type (Format)	**Extension File Name**
Windows Media Audio and Video File Format	.asf , wmv
Windows Audio and Video File Format	.avi (DivX 3.x/4.0/5.0, Xvid, Motion JPEG AVI)
Audio File Format	.mp3
Moving Picture Experts Group (MPEG)	.mpeg, mpg, dat
IMAGE	.bmp, tif, gif, png, jpg

PVR Console

PVR Console consists of 5 applications.

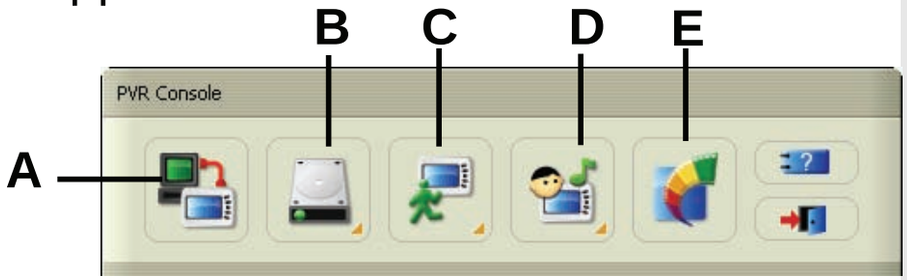

A. MediaConverter

Converts multimedia files into playable formats on PVR.

B. Disk Tools

Calls up Microsoft's **Disk Checkup** and **Disk Defragmenter** programs for system diagnosis and rearrangement.

C. Mobile Assistant

Opens **Calendar to Go, Powerpoint to Go** and **Album to Go** programs for users to export files from PC to your device.

D. Personal Style

Edits **Startup Screen** and **Sound Effect** for PVR.

E. MAX Console

Calls up Max Console software for image editing and retouching.


Note: In order for the above tools to function properly, please download and install Media Player 9 and Media Encoder 7.1 from Microsoft's website.

Photo Playback

Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter.





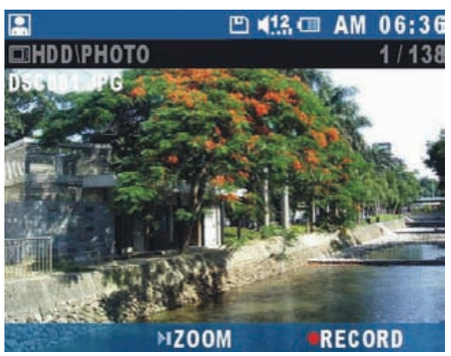

Multiple Photo View (Default):

Photo thumbnails are displayed.

Single Photo View:


To view a single photo, press ▲ / ▼ / ◀ / ▶ buttons to select and press ⏯ button to display.

Zoom

Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter.





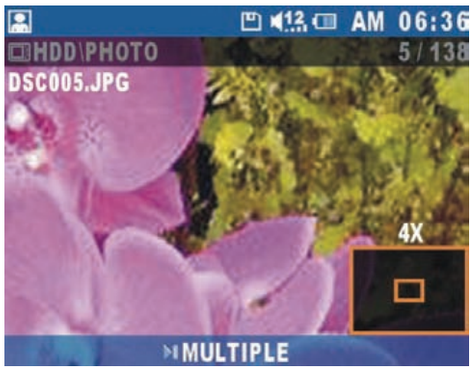

Press ▲ / ▼ / ◀ / ▶ buttons to select a photo and press ⏯ button to view.

When viewing a photo as full screen, press ⏯ button. The selected photo will be magnified by 2X. To magnify to 4X, press ⏯ button again.


To return to normal viewing, press ⏯ button again.

Record Message to a Photo

Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter. Press ▲ / ▼ / ◀ / ▶ buttons to select a photo you want to attach a voice message to and press ● **REC** button.





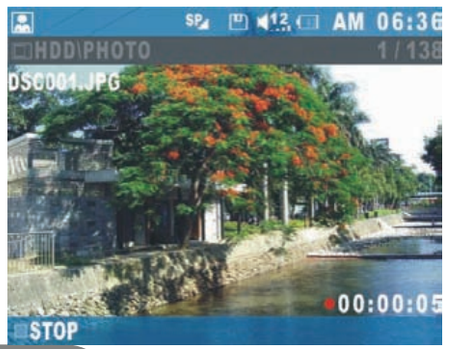

The screen on the left appears. Simply press ⏯ button to start recording.

To stop, press ■ or ● **REC** button.


When the recording is done, a 🔊 icon will appear on the top right hand corner of the photo.

Tip:
You can change the audio quality setting before recording. Simply press ▲ button to select Q and press ⏯ button to enter.


To change the setting, press ◀ / ▶ buttons to select and press ⏯ button to confirm. You may press ⏯ button to start recording with the new setting.

Playback/Delete Message Attached to Photo

Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter**.**

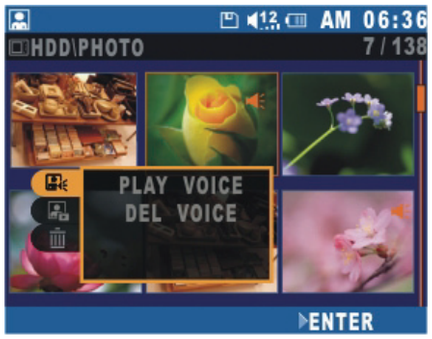


Select photo with a voice message attached. Press **MENU** button and scroll down to select icon. Press ▶ button to enter **PLAY VOICE**.

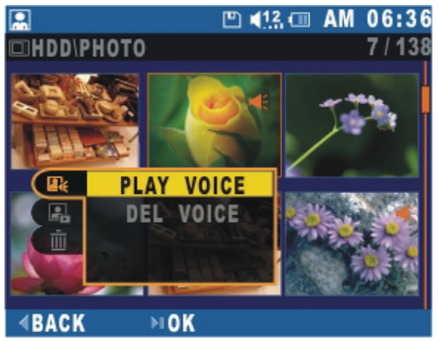



Play Voice:


Press ⏯ button twice to start playing.

To play more voice messages, scroll up to ◂ ▸ icon and then press ◀ / ▶ buttons to select. To start playing, scroll down to ⏯ and press ⏯ button.

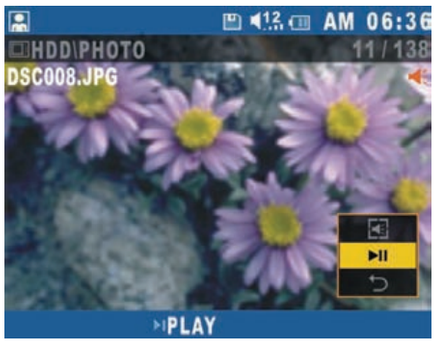

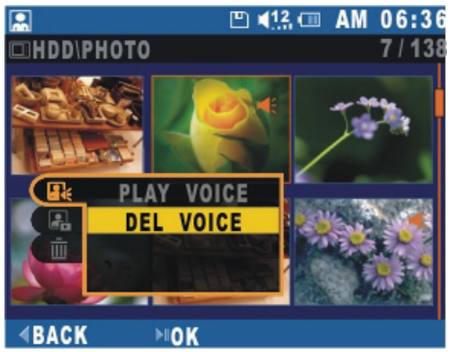

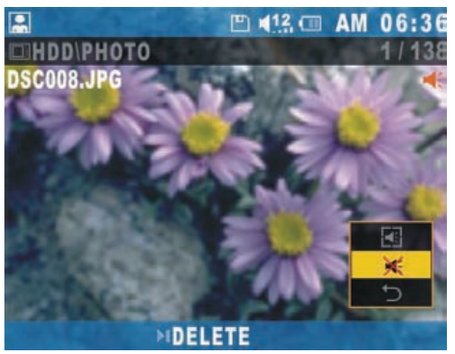

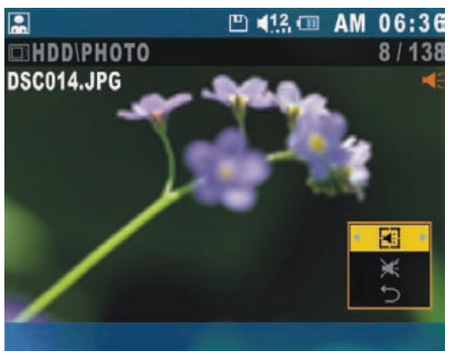

Delete Voice Message:

Scroll down to select **DEL VOICE** and press ⏯ button twice to delete the voice message.

To delete more voice messages, scroll up to ◂🔊▸ icon and press ◀ / ▶ buttons to select. Scroll down to 🔇 and press ⏯ button to delete.

When the voice message is deleted, the 🔇 icon will be removed from the photo.

Slide Show Playback

Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter.



Press ▲ / ▼ / ◀ / ▶ buttons to select the photo you want to start the silde show with. Press **MENU** button and scroll down to select . Press ▶ button twice and then press ⏯ button to start.

Tip:



You can change the interval and transition settings. To change the interval, scroll up to and press ⏯ button to enter. Press ▲ / ▼ buttons to set the interval and press ⏯ button to confirm.




To continue to change the transition, press ⏯ button to enter .

Press ◀ / ▶ buttons to select one and press ⏯ button to confirm.

Effects

Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter.




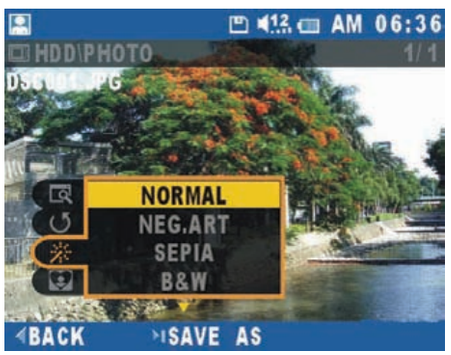


Press ▲ / ▼ / ◀ / ▶ buttons to select the photo you want to apply effects to. Press **MENU** button and scroll down to select . Press ▶ button to preview the effect. To save the effect, press ⏯ button to save as a new photo.

Memory Mix


Select **PHOTO PLAYER** in the **Main Menu** and press **OK** button to enter.

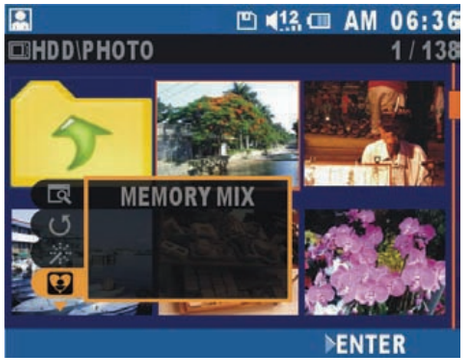



Press ▲ / ▼ / ◀ / ▶ buttons to select the photo you want to add a frame to. Press **MENU** button and scroll down to select . Press ▶ button to highlight **MEMORY MIX**. Press ⏯ button to add a frame.

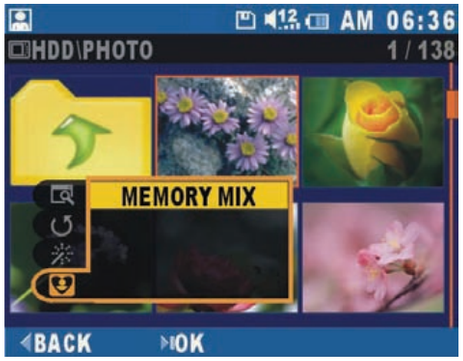

To select other frames, press ◀ / ▶ buttons to switch. To apply the frame, press ⏯ button to add the frame and save as a new photo.

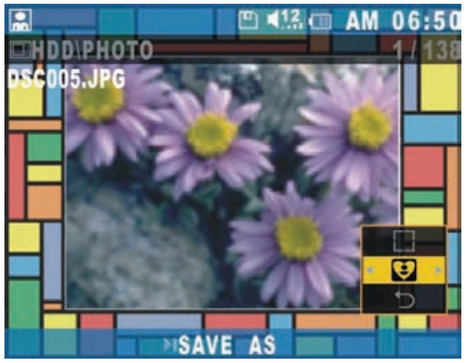

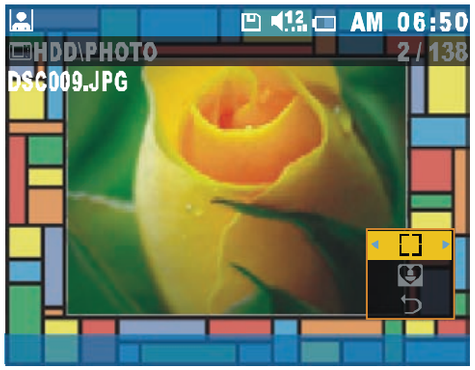

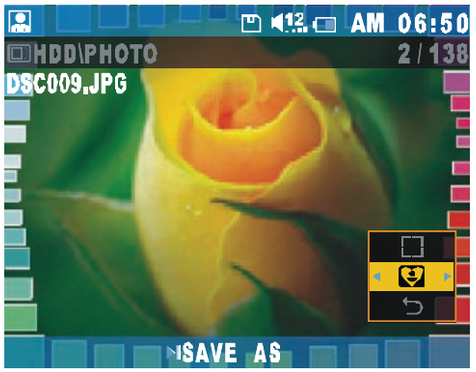


If you want to add the current selected frame to other photos, scroll up to ◂[ ]▸ icon and press ◀ / ▶ buttons to preview the frame.

To save the file, scroll down to ◂ ▸ icon and press ⏯ button to save as a new photo.


Video Playback


Select **VIDEO PLAYER** in the **Main Menu** and press **OK** button to enter.

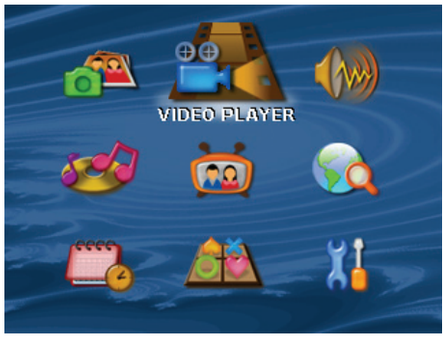


Press ▲ / ▼ / ◀ / ▶ buttons to select a video and press ⏯ button to play.

To stop, press ■ button.

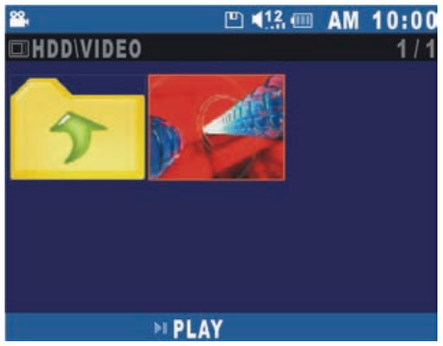

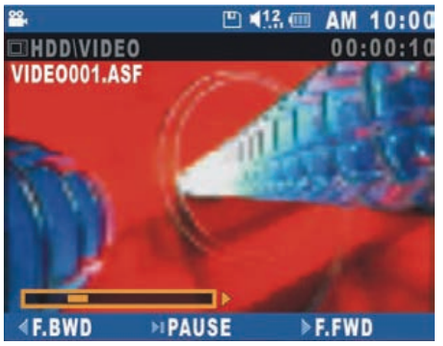

Tip:

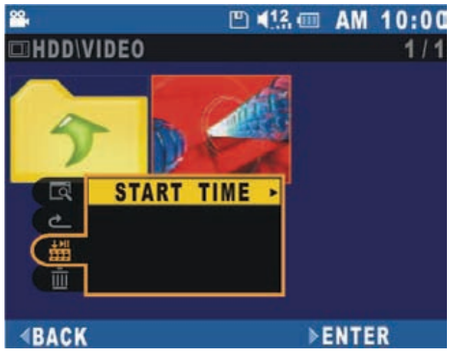


You can set up the start time of the selected video before playing.

Press **MENU** button and scroll down to ⌨.

Press ▶ button to enter the screen shown on the left.

Note: To turn off the power during video playing, first press the **STOP** button to end the operation and then press the power button to turn it off.



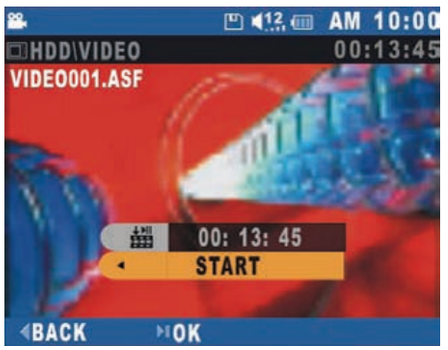

Set Up Start Time

Press ▶ button again and the video length will show on the screen. Press ⏯ button and then press the ▲ / ▼ buttons to set up **HOUR**. Press ⏯ button and then press ▲ / ▼ buttons to set up **MINUTE**. Press ⏯ button and then press ▲ / ▼ buttons to set up **SECOND**.

Press ⏯ button to confirm and then press ⏯ button again to start playing with the new setting.

Audio Playback

Select **AUDIO PLAYER** in the **Main Menu** and press **OK** button to enter.







Press ▲ / ▼ buttons to select an audio file and press ⏯ button to play.

To stop, press ■ button.

Tip:
If the audio file you want to play resides in a folder under the current AUDIO directory, press ▲ / ▼ buttons to highlight the folder, and then press ⏯ button to enter.





Note: To save power, you may turn off the LCD display by pressing |▢| button on the PVR.

Note: To turn off the power during audio playing, first press the **STOP** button to end the operation and then press the power button to turn it off.

Record Audio

Select **AUDIO PLAYER** in the **Main Menu** and press **OK** button to enter.

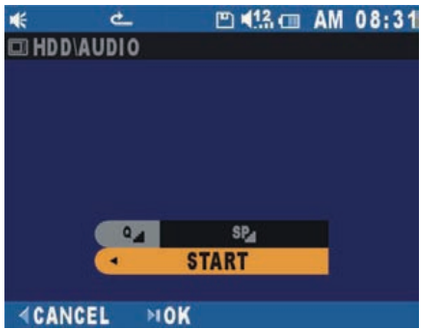

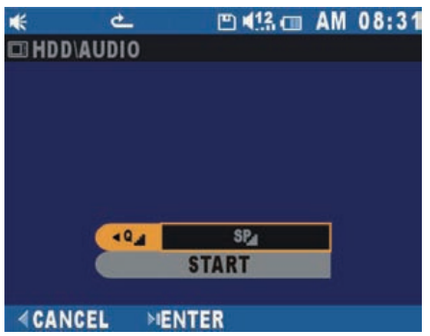



Press ● **REC** button. The screen on the left appears. Press ⏯ button or ● **REC** button to start recording.

To stop, press ■ or ● **REC** button.

Tip:

You can change the audio quality setting before recording.

Set Up Audio Quality

Press ▲ button to select Q and press ⏯ button to enter.

To change the setting, press ◀ / ▶ buttons to select one and press ⏯ button to confirm. You may press ⏯ button to start recording with the new settings.

Repeat Playback

Select **AUDIO PLAYER** in the **Main Menu** and press **OK** button to enter.








Repeat Normal

Press **MENU** button and scroll down to the ↻. Press ▶ button to highlight ↻ **REPEAT NORMAL**. Press ⏯ button to confirm.

Press ▲ / ▼ buttons to highlight an audio file and press ⏯ button to start playback from the current selected file to the last file once.





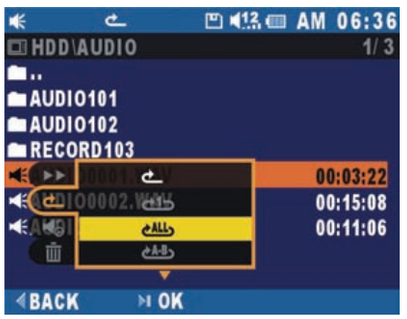



Repeat One

Select 1 from REPEAT Menu and press ⏯ button to confirm.


Press ▲ / ▼ buttons to highlight an audio file and press ⏯ button to start playback of the current selected audio file continuously.

To return to a normal, select **REPEAT NORMAL** from the menu.

Repeat All

Select ALL from REPEAT Menu and press ⏯ button to confirm. Press ▲ / ▼ buttons to highlight an audio file and press ⏯ button to start playback all the audio files continuously.

To return to normal, select **REPEAT NORMAL** from the menu.

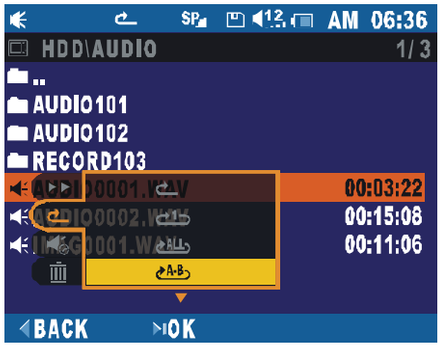





Repeat A-B

Select A-B from REPEAT Menu and press ⏯ button to confirm.

Press ▲ / ▼ buttons to select an audio and press ⏯ button to start playback.

During the playback, press ⏯ button to set point A and then press ⏯ button again to set point B.

When the setting is done, press ⏯ button to start playback from point A to B continuously.

To return to a normal, select **REPEAT NORMAL** from the menu.



Repeat Random

Select from REPEAT Menu and press ⏯ button to confirm.


Press ▲ / ▼ buttons to select an audio and press ⏯ button to start playback of all the audio files in a random order.


To return to normal, select **REPEAT NORMAL** from the menu.

Music Playback

Select **MUSIC PLAYER** in the **Main Menu** and press **OK** button to enter.



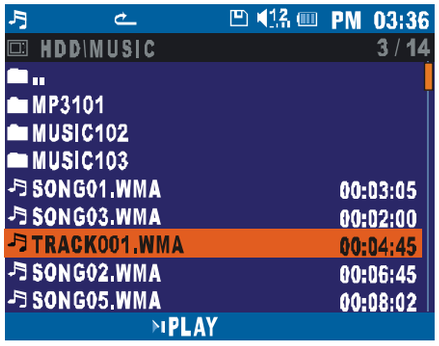


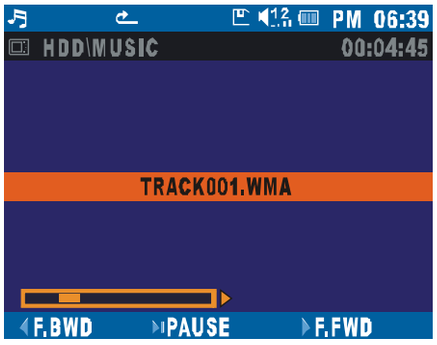

Press ▲ / ▼ buttons to select a file and press ⏯ button to play.

To stop, press ■ button.

Tip:
If the file you want to play resides in the folder under the current MUSIC directory, press ▲ / ▼ to highlight the folder and then press ⏯ button to enter.

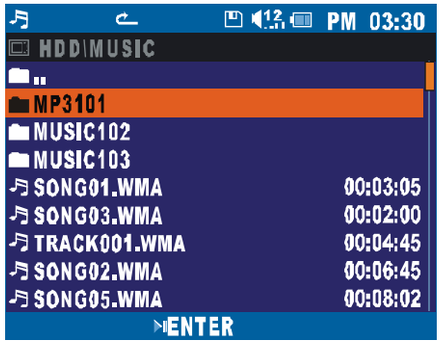


Note: To save power, you may turn off the LCD display by pressing |□| button on the PVR.


Note: To turn off the power during music playing, first press the STOP button to end the operation and then press the power button to turn it off.

Music Alarm

Select **MUSIC PLAYER** in the **Main Menu** and press **OK** button to enter.

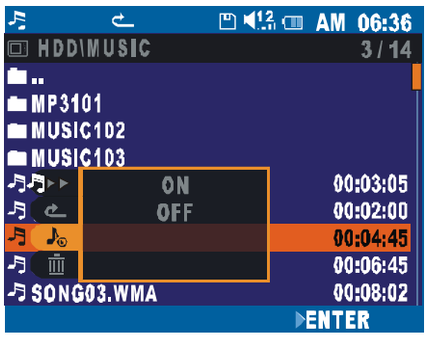


Press ▲ / ▼ buttons to select the file you want to set as the ring sound of the music alarm. Press **MENU** button and scroll down to select icon. The screen on the left appears. Press ▶ button to enable the function.

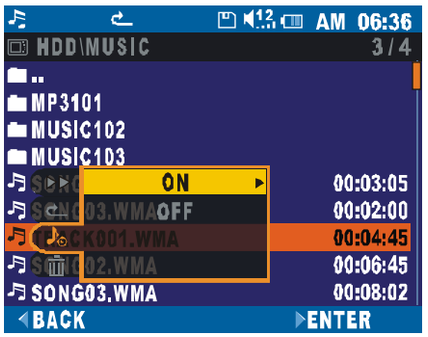



Time Set Up

Press ▶ button and then press ⏯ button to set the time.

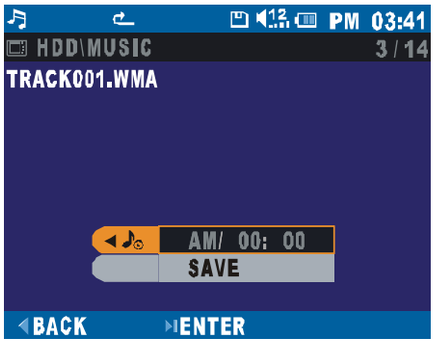

Note: Audio Player also provides Alarm (Voice Alarm) function. The operation procedure is very similiar to this one. You can choose either to set alarm in Audio Player or in Music Player. Only one setting (the latest) will be used on alarm.

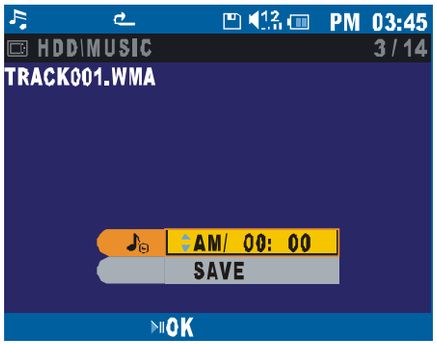


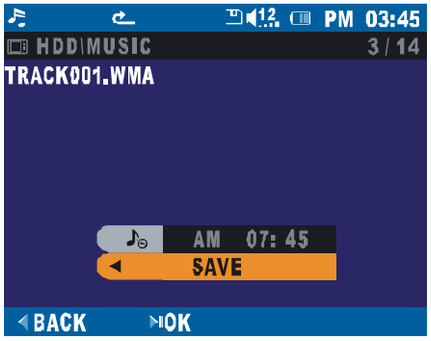

Press ▲ / ▼ buttons to set **AM** or **PM** and press ⏯ button to confirm and continue.
Press ▲ / ▼ buttons to set **HOUR** and press ⏯ button to confirm and continue.
Press ▲ / ▼ buttons to set **MINUTE** and press ⏯ button to confirm and continue.


Press ⏯ button to save settings.

Record Videos from TV to PVR

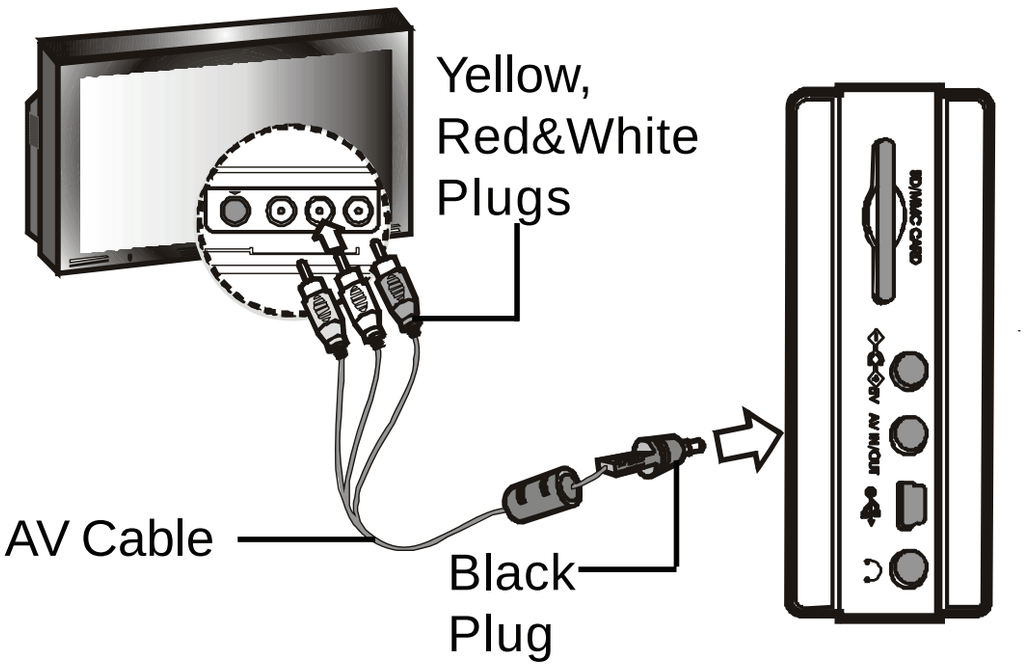

Connect to TV

1. Connect one end (black plug) of the provided AV cable to the **AV IN** jack of PVR.
2. Connect the other end (3-strip, audio & video connectors) to the corresponding **TV OUT** ports of your TV.
3. Power on the TV and PVR.

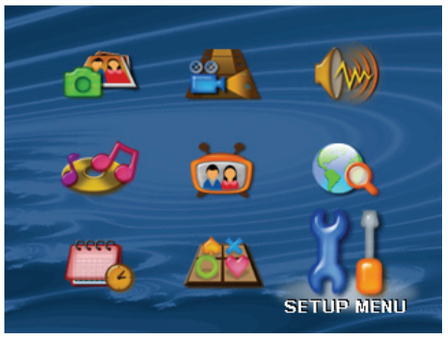







Set Up TV System

Select **SETUP MENU** in the **Main Menu** and press **OK** button to enter. Press ▶ button to scroll to |▭| **DISPLAY** page and scroll down to select **TV SYSTEM**. Press ◀ / ▶ buttons to select proper TV system and press **MODE** button to return to the **Main Menu**.

Start Recording

Select **AV CENTER** in the **Main Menu** and press **OK** button to enter. Press ● **REC** button and then press ⏯ button or ● **REC** button to start recording. To stop, press ■ or ● **REC** button.

Tip:

You can set up the video quality and the length of the recording time before hand. Simply press ▲ button to select Q and press ⏯ button to enter.



Set Up Video Quality

To change the setting, press ◀ / ▶ buttons to select one and press ⏯ button to confirm.



Set Up Recording Length


Press ⏯ button again to enter ⌨ time length setting. To set up the recording length, press ▲ / ▼ buttons to set **HOUR** and then press ⏯ button to confirm and continue to the **MINUTE** setting. (Max recording time is 4 hours.)



When the above setting is done, press ⏯ button to confirm and then press ⏯ button to start recording.




Record Videos from DVD toPVR

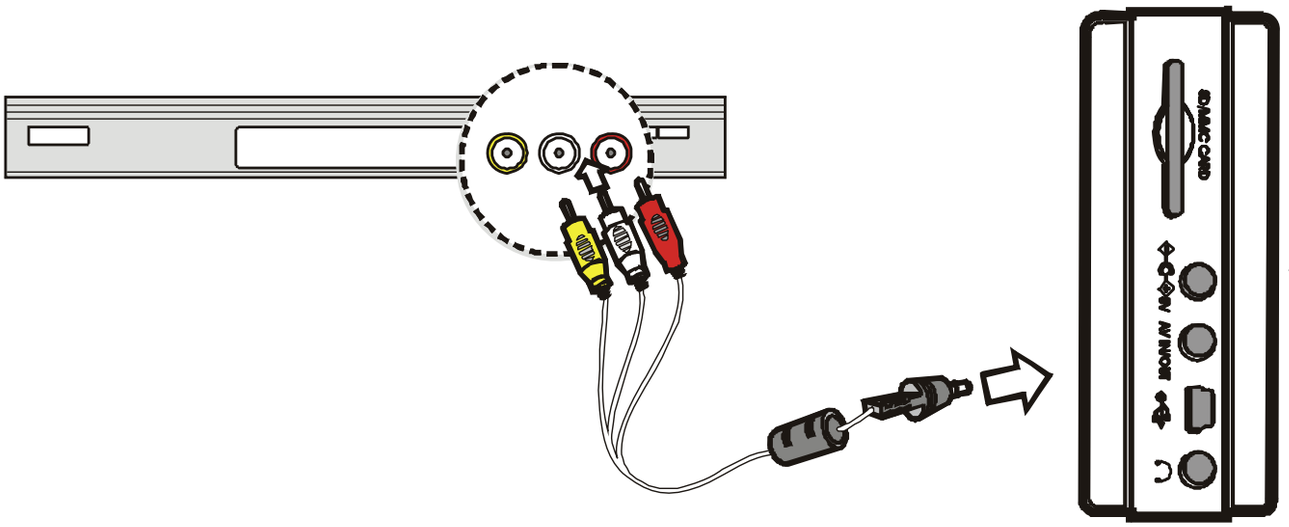

DVD to PVR Connection

1. Connect one end (black plug) of the provided AV cable to the **AV IN** jack of PVR.
2. Connect the other end to (3-strip) to the corresponding **VIDEO** and **AUDIO** output ports of the DVD player.
3. Power on the DVD player and PVR.

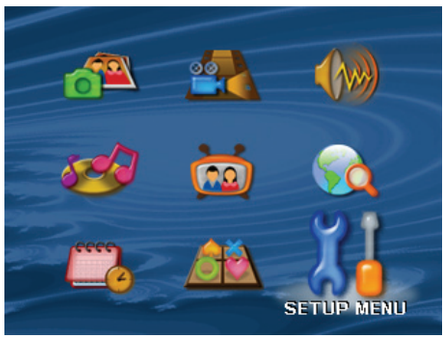







Set Up TV System

Select **SETUP MENU** in the **Main Menu** and press **OK** button to enter. Press ▶ button to scroll to **DISPLAY** page and scroll down to select **TV SYSTEM**. Press ◀ / ▶ buttons to select a proper TV system and press **MODE** button to return to the **Main Menu**.

Strat Recording

Select **AV CENTER** in the **Main Menu** and press **OK** button to enter. Press the **PLAY** button on the DVD player. Meanwhile press ● **REC** button on the PVR and then press ⏯ button or ● **REC** button to start recording. To stop, press ■ or ● **REC** button.


Tip:


To set up the video quality and the length of the recording time, refer to the related discription on Page 32.

Timer Record





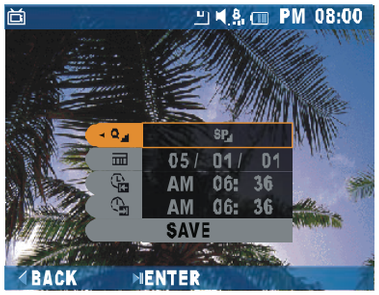

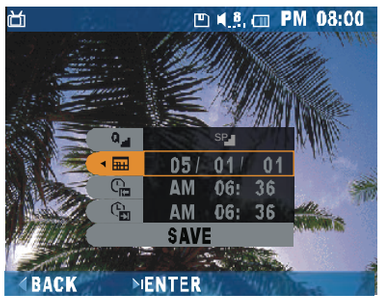


Enter **AV Center**. Press **MENU** button and press ▶ button twice to enable timer recording and enter **TIMER RECORD** setting.


Set Up Quality


Press ⏯ button to enter **QUALITY** setting. Press ◀ / ▶ buttons to select a proper setting and press ⏯ button to confirm and continue.


Set Up Date

Press ⏯ button to enter **DATE** setting. Press ▲ / ▼ buttons to set to **YEAR** and press ⏯ button to move to **MONTH**. Press ▲ / ▼ buttons to set month and press ⏯ button to move to **DAY**. Press ▲ / ▼ buttons to set day and press ⏯ button to confirm and continue.

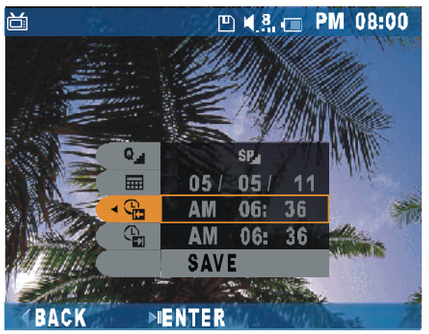

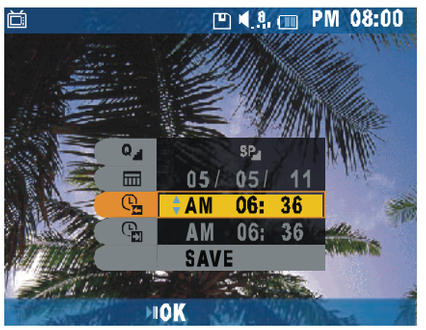

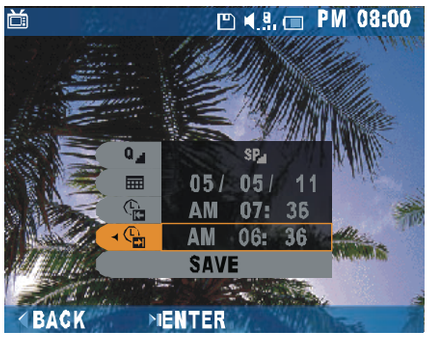

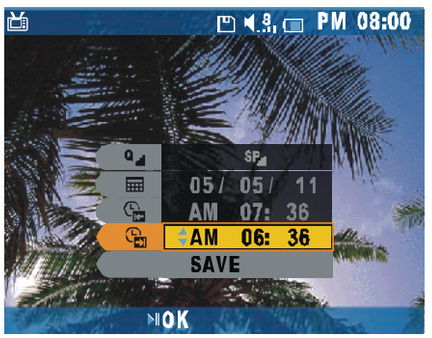

Set Up Start Time

Press ⏯ button to enter **START TIME** setting. Press ▲ / ▼ buttons to set **AM or PM** and press ⏯ button to move to **HOUR**. Press ▲ / ▼ buttons to set hour and press ⏯ button to move to **MINUTE**. Press ▲ / ▼ buttons to set minute and press ⏯ button to confirm and continue.

Set Up End Time

Press ⏯ button to enter **END TIME** setting. Press ▲ / ▼ buttons to set **AM or PM** and press ⏯ button to move to **HOUR**. Press ▲ / ▼ buttons to set hour and press ⏯ button to move to **MINUTE**. Press ▲ / ▼ buttons to set minute and press ⏯ button to confirm and continue.

Press ⏯ button to save the above settings.

Note: In case of insufficient power supply, connect the power adapter during timer recording.


FILE BROWSER

Select **FILE BROWSER** in the **Main Menu** and press **OK** button to enter.



Press ▲ / ▼ buttons to select **HDD** (built-in hard disk drive) or **CARD** (external memory) and press ⏯ button to enter.


<u>Select a file or folder:</u>

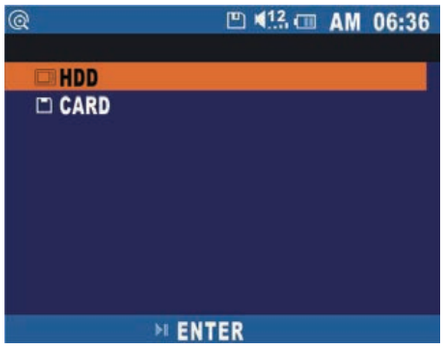

Press ▲ / ▼ buttons to highlight a folder or a file and press ▶ button to select. To cancel the selection, press ▶ button again.

<u>Enter a folder:</u>

To enter a folder, press ⏯ button.

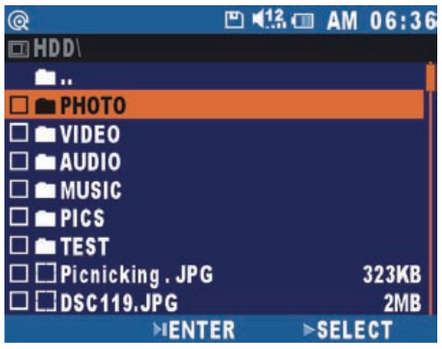


Note: The file format which is incompatible with PVR will not be displayed in the File Browser.

Sort

Use the File Browser tool to organize the large collection of media in your PVR.



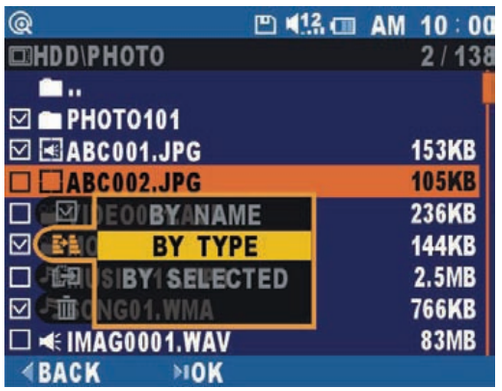



Enter **FILE BROWSER.** Press **MENU** button and scroll down to select icon. Press ▶ button to highlight **BY TYPE** and press ⏯ button to confirm. The files will be sorted by type accordingly.


Instead of sorting files by **TYPE,** you may select to arrange **BY NAME** or **BY SELECTED**. Simply highlight **BY NAME** or **BY SELECTED** and press ⏯ button to confirm.

The files will be arranged based on your selection.

Rename

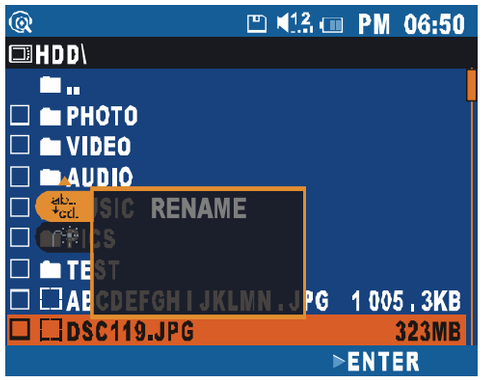

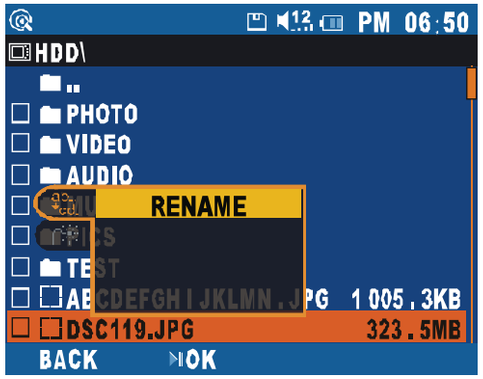

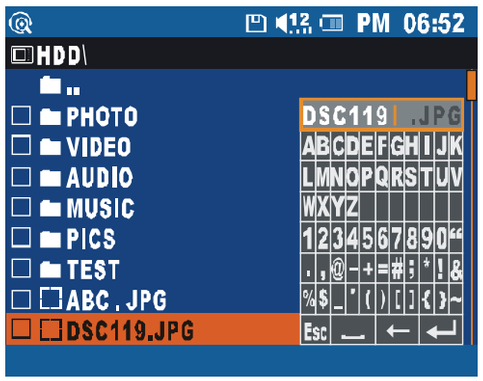

Enter **FILE BROWSER.** Press ▲ / ▼ buttons to highlight a file you want to rename.


Press **MENU** button and scroll down to select ab... cd. icon. Press ▶ button to highlight **RENAME** and press ⏯ button to confirm. An on-screen keyboard (refer to Page 41 for keyboard definition) appears on the right side with the original filename shown above.


Press ▲ / ▼ / ◀ / ▶ buttons to select letters and press ⏯ button to confirm.

When renaming is done, select ↵ from the on-screen keyboard and press ⏯ button to finish.

Create New Folder



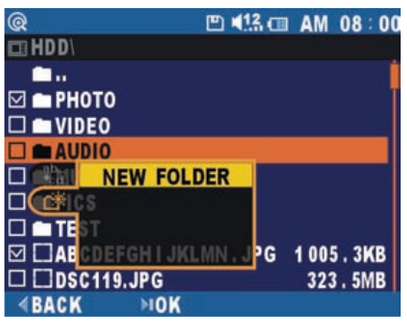

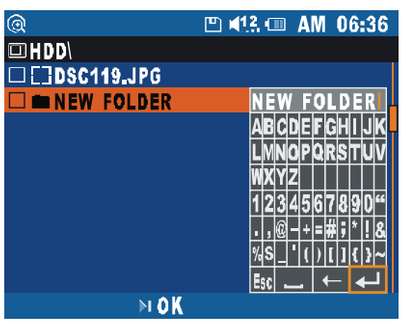


Enter **FILE BROWSER.** Press **MENU** button and scroll down to select icon. Press ▶ button to highlight **NEW FOLDER** and press ⏯ button to confirm.

An on-screen keyboard appears on the right side with the folder name shown above.

To keep the folder name, simply press ⏯ button to return. To change the folder name, press ▲ / ▼ / ◀ / ▶ buttons to select the letters and press ⏯ button to confirm.

When renaming is done, select ↵ from the on-screen keyboard and press ⏯ button to finish.

On-Screen Keyboard

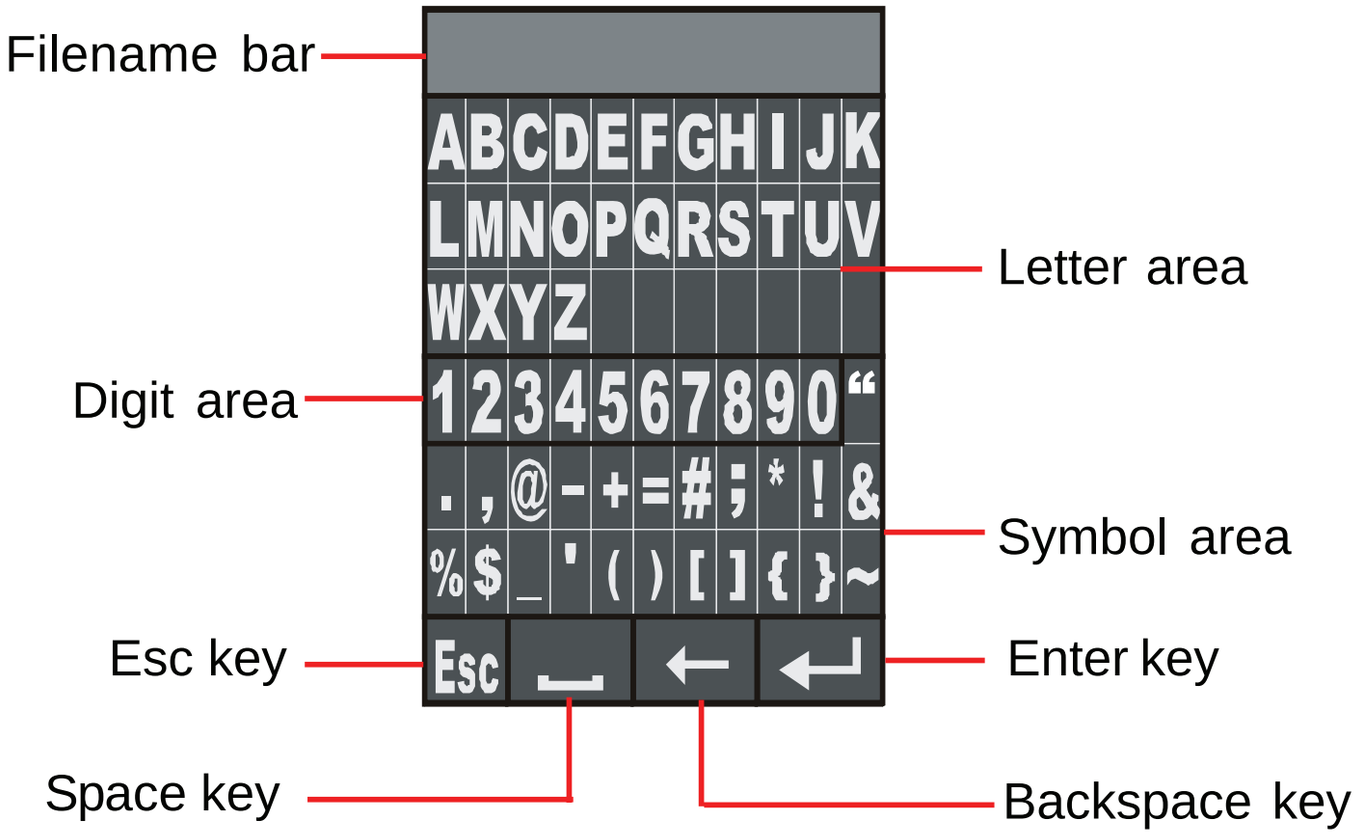


CALENDAR

Select **CALENDAR** in the **Main Menu** and press **OK** button to enter.




The **Calendar** appears. You will see **TODAY** is highlighted in orange.

Note: The Calendar appears with a monthly display. To switch to a weekly or daily display, press ⏯ button.

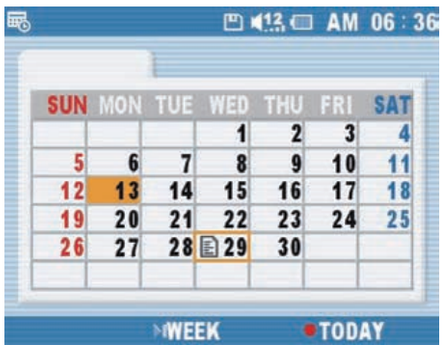

To switch to Clock view, press **MENU** button and press ▶ and ▼ buttons to highlight **CLOCK**. Press ⏯ button to display Clock view.

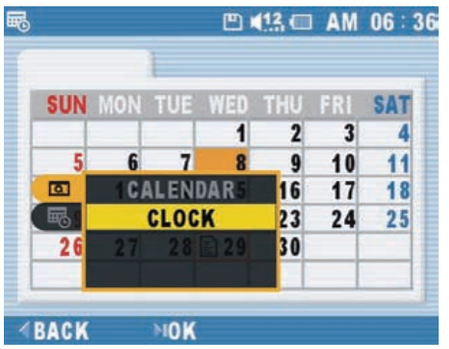




CALENDAR


You can import your own calendar data from either Microsoft Outlook 2000/2002/2003 or the provided e-Life Pal program. The data will then appear in the calendar.


Import from Outlook (e.g. Outlook 2000)

1. Open Outlook 2000's Calendar.

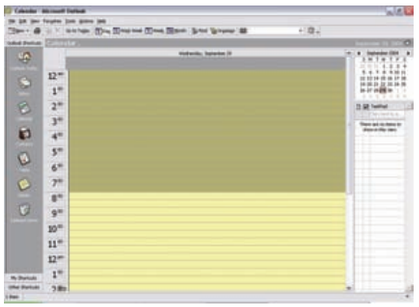



2. Double-click on the time frame to open a new event.

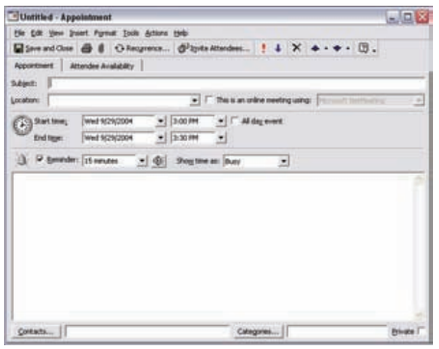

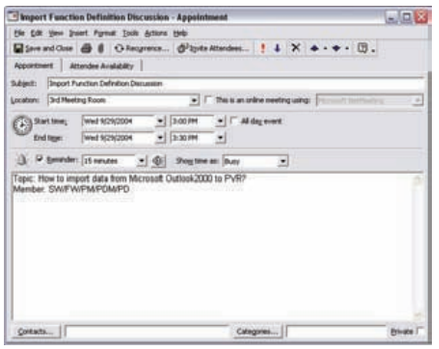

3. Edit, save and close the event.
4. Close **Outlook 2000.**
5. Select *Calendar to Go* from  **Mobile Assistant**'s pull-down menu.
6. Select **Outlook Calendar** and specify the date range.
7. Press  **APPLY** button. The Calendar data will be listed as shown below. Press  button to transfer the data from Outlook 2000 to the PVR.

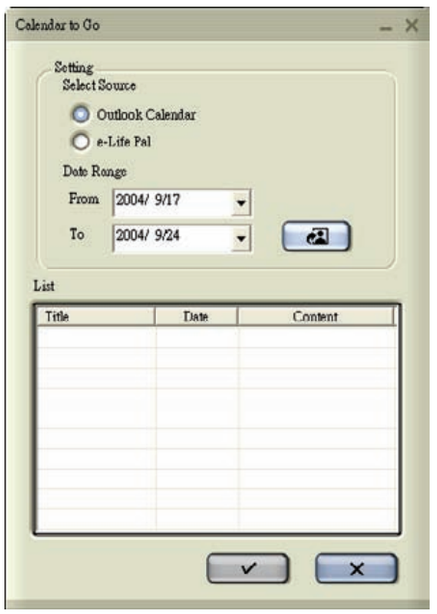


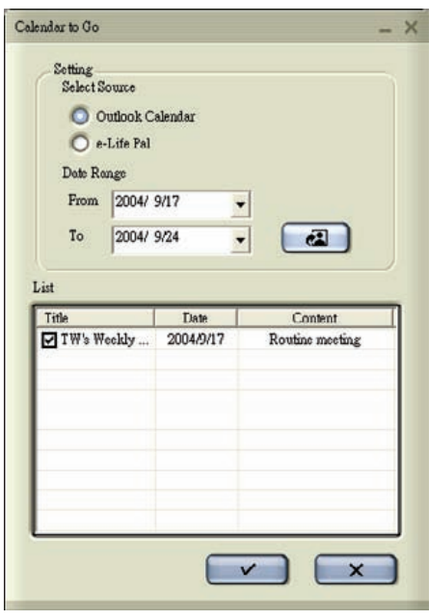

Import from e-Life Pal

1. Open and enter e-Life Pal and click on the **Edit** or **Calendar** tab.



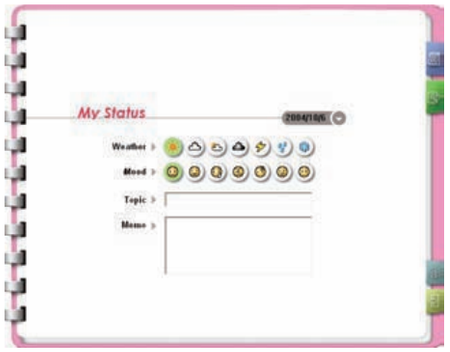



2. Click on the **Menu** tab and select **Settings** icon.



3. Select **Date** and **Type** and leave your message on the **Event** palette.

4. Press **Add** button. The new event will be shown on the **List** palette.

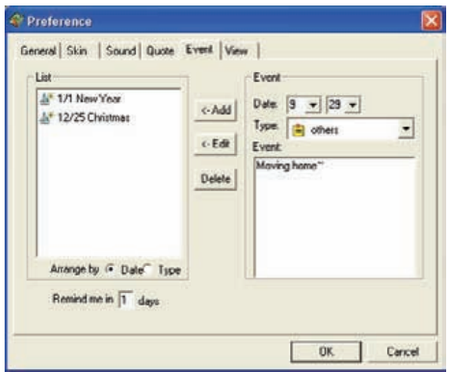


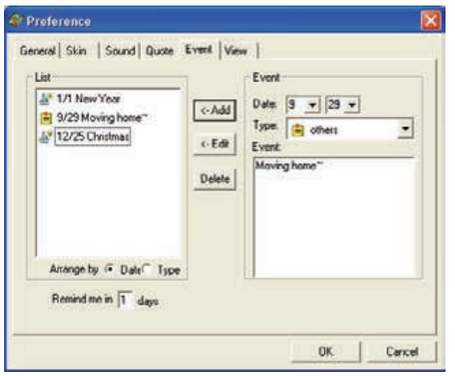


5. Press **OK** button and close e-Life Pal.

6. Select *Calendar to Go* from  **Mobile Assistant**'s pull-down menu.

7. Select **e-Life Pal** and specify the date range.

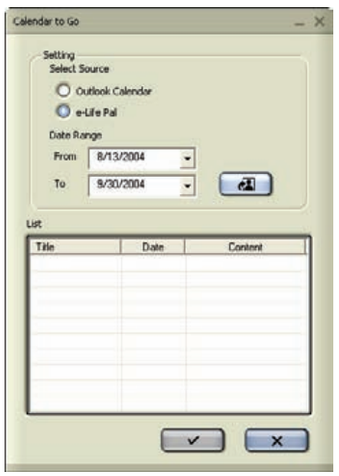

8. Press  **APPLY** button. The Event data will be listed on the **List** palette.

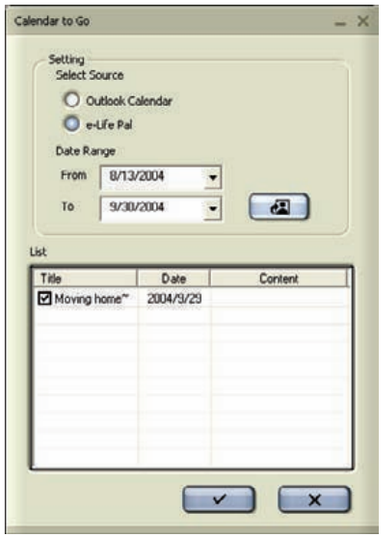

9. Press  button to start transferring from e-Life Pal to the PVR.

Next time you open the Calendar, you will see that the event data is synchronized.



GAME

Select **GAME** in the **Main Menu** and press **OK** button to enter.




Press ◀ / ▶ buttons to select a game you want to play and press ⏯ button to enter.

Change the Startup Screen

To change the Startup Screen, open the **PVR Console** and press the  *Personal Style* button. The screen below appears.

Select an image from the Image List

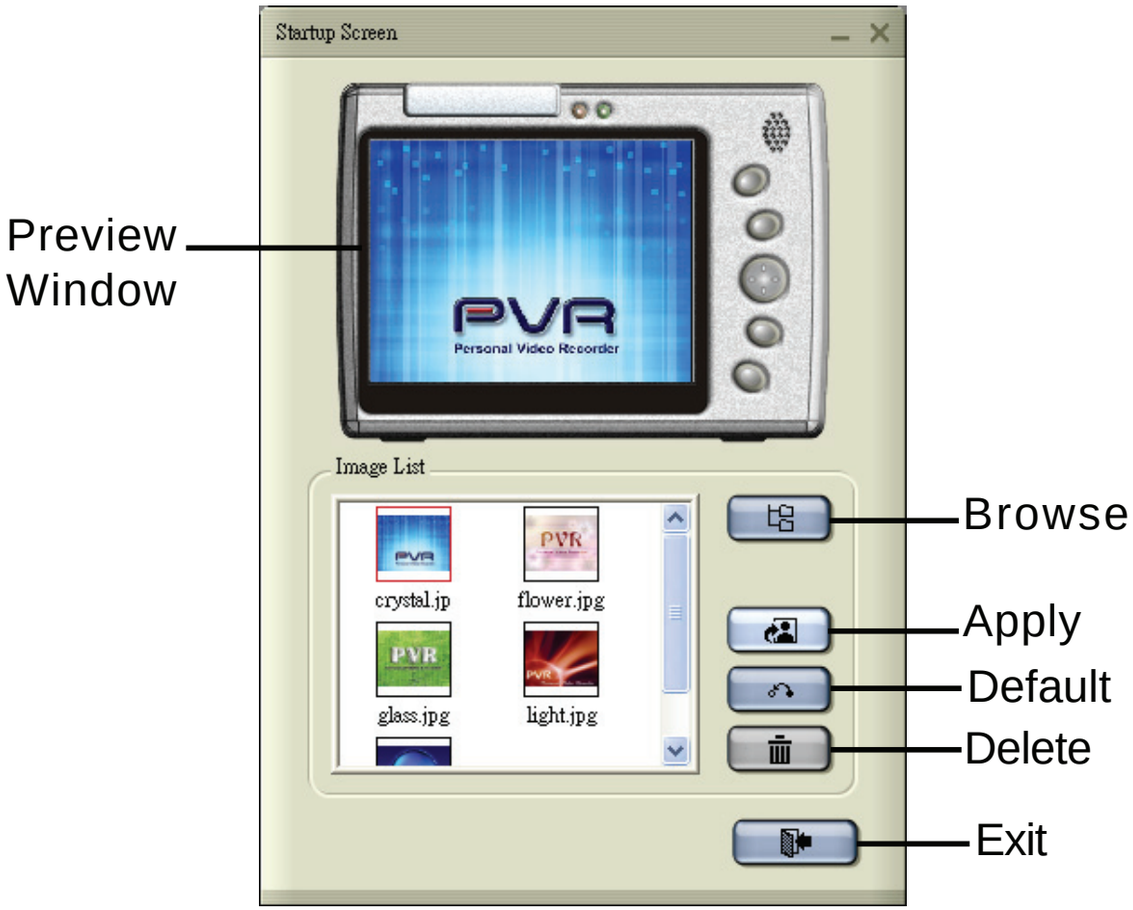

There are 5 startup screen images provided in the **Image List**. Select one from the list and press the  **APPLY** button to tranfer to the PVR.

Import an image from your computer


Press the  **BROWSE** button to locate an image file (*.bmp or *.jpg). The file will then be imported into the **Image List**. Select it from the list and press the  **APPLY** button to tranfer to the PVR.

Reminder: Please note that the startup image will be updated on the second restart.

Note: The provided startup screen image is **320 x 240** pixels. If the image you import is not this size, the **PVR Console** will adjust its size to fit the screen.

Change Startup Sound & Button Sound

To change the Startup Sound or Button Sound, open the **PVR Console** and press the  *Personal Style* button to select **Sound Effect**. The screen below appears.

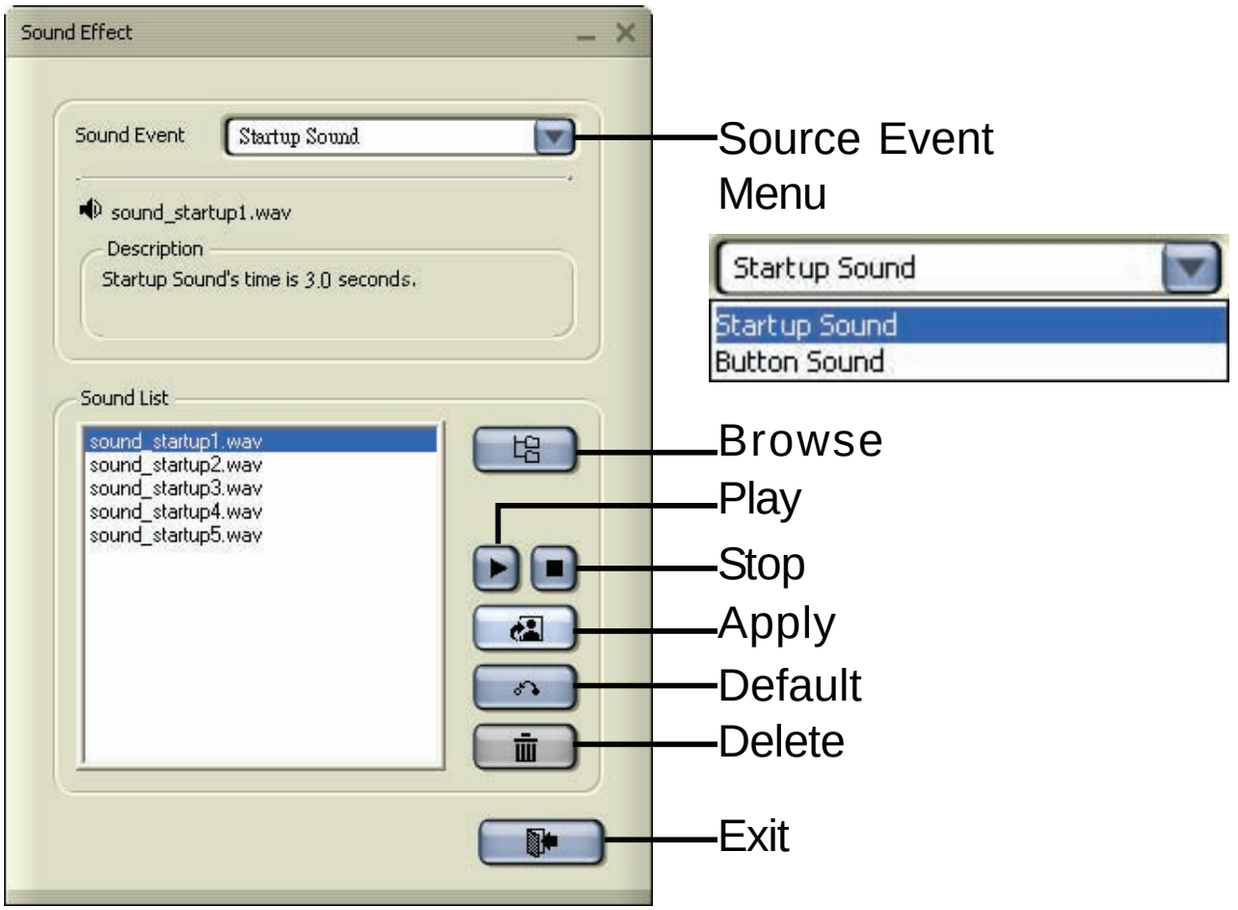

Select the sound from the Sound List

There are 5 sound effects provided for each startup and button sound. To change them, first select either **Startup Sound** or **Button Sound** from the *Sound Event* menu and follow the instructions below.

Select a file from the **Sound List** and and press the  **APPLY** button to tranfer to the PVR. To preview the file before the transfer, press  button.

Import the sound from your computer

Press the  **BROWSE** button to locate a sound file (*.wav), the file will then be imported into the **Sound List**. Select it from the list and press the  **APPLY** button to tranfer to the PVR.

Note: The startup sound takes 3 seconds and the button sound takes 0.3 second. If the sound file you import takes more time, PVR Console will cut the file into the appropriate time length.

DPS


PVR features direct print support. If you connect it to a printer that supports DPS (Direct Print Services), photos can be printed directly without attaching to a computer. Use the DPS Menu to set up advanced print settings.

DPS Menu contains the following item:


	**PHOTO SET**	SELECT PHOTO	BROWSE \ NONE
		OPTIMAL	ON \ OFF
		COPIES	1~9
	**PAPER SET**	SIZE	DEFAULT \ 4” X 6” \ 5” X 7” \ 8.5” X 11”
		PAPER	DEFAULT \ PHOTO \ FAST PHOTO
		BORDER	DEFAULT \ ON \OFF


How to Print

1. Power on the PVR and connect it to the printer with the USB cable. The screen below appears.

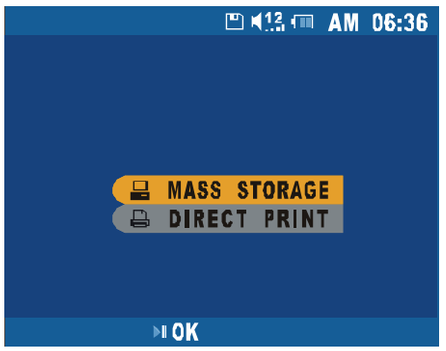


2. Press ▼ button to select **DIRECT PRINT** and press ⏯ button to enter **DPS** Menu.

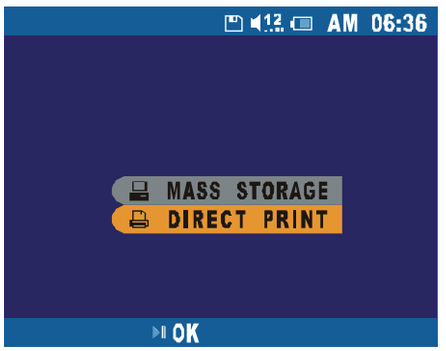


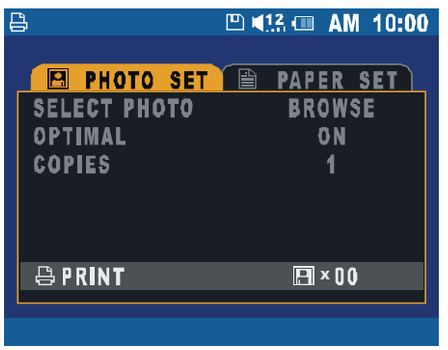

3. Press ▼ button to highlight **SELECT PHOTO** and press ⏯ button to browse photos.

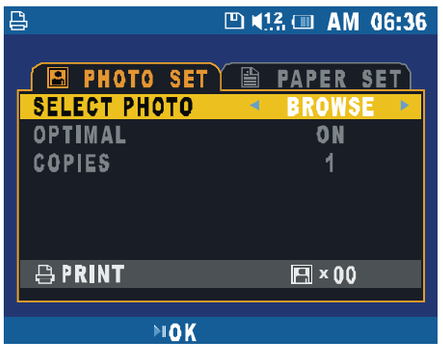

4. Press ▲ / ▼ / ◀ / ▶ buttons to select the photo(s) and press ⏯ button to mark them. To remove the mark, select the photo and press ⏯ button again.

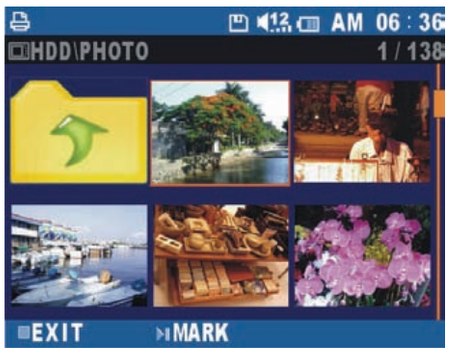



5. When the selection is done, press ■ button to return to DPS Menu and continue.

6. The number of the selected photos will show on the button of the screen. Press ▼ button to highlight **OPTIMAL**.



7. Press ◀ / ▶ buttons to enable or disable the setting. Press ▼ button to continue.

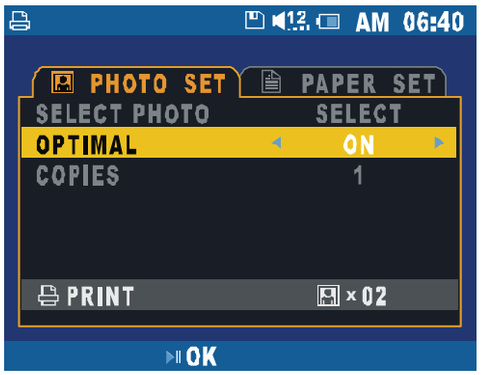


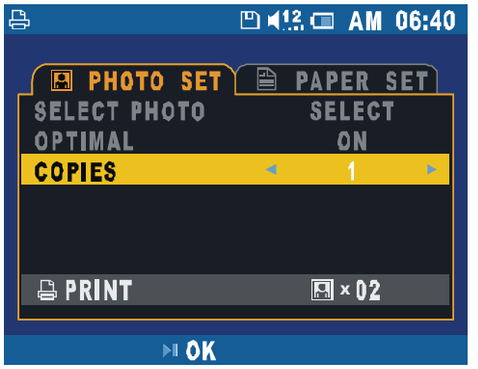


8. Press ◀ / ▶ buttons to select the number of copies you want to print and press ⏯ button to confirm.

9. Press ▼ button and ▶ button to go to **PAPER SET** page.



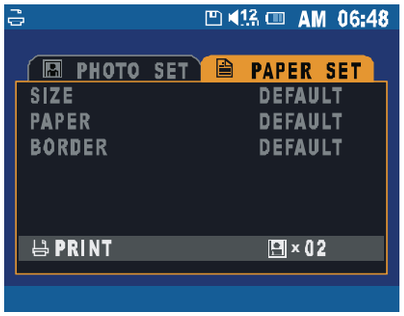


10. Press ▼ button to highlight **SIZE** and press ◀ / ▶ buttons to select the paper size.Press ▼ button to continue.

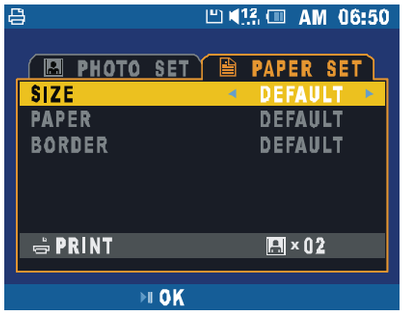


Note: If you select “DEFAULT” in paper size setting, then printer will dedicate a proper paper size by itself.

11. Press ◀ / ▶ buttons to select the paper type and press ▼ button to continue.

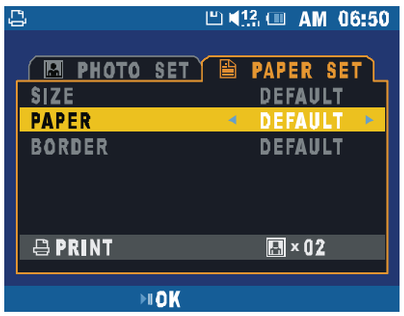


Note: If you select “DEFAULT” in paper type setting, then printer will dedicate a proper paper type by itself.


12. Press ◀ / ▶ buttons to add/cancel borders or just keep the original photo.

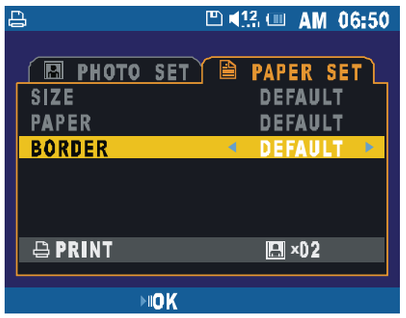

Note: To print out the entire photo and maintain 1:1 image proportion, it is recommended that you add borders to your photo.

When you are satisfied with the above settings, press ⏯ button to start printing. To cancel, press ■ button anytime.

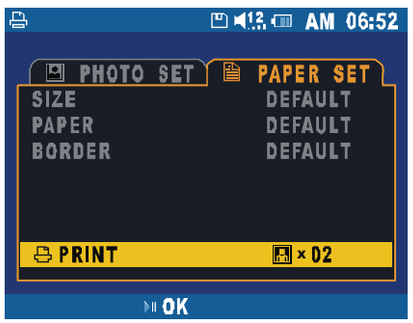

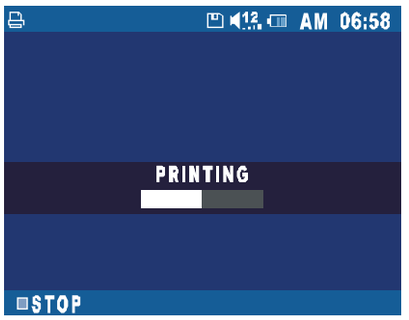

When you power on the PVR, you will see a **Main Menu** containing 9 different task icons. Each task icon represents an individual function. The following chart explains the icons and their corresponding functions.

PHOTO PLAYER MENU

Enter **PHOTO PLAYER** and press **MENU** button to open this menu. The menu contains the following:

	**VIEW**	LIST \ MULTIPLE \ SINGLE
	**ROTATE**	 Press the directional arrows to select other photos.
		 Press the directional arrows to rotate the photo by 90° CW or 90° CCW
		 Cancel and exit menu.
	**EFFECTS**	NORMAL / NEGATIVE ART / SEPIA / B&W / MOSAIC
	**MEMORY MIX**	 Press the directional arrows to select other photos.
		 Press the directional arrows to select borders.
		 Cancel and exit menu.

	PLAY VOICE	Press the directional arrows to select other photos with voice attached.	
		Press to play the selected voice clip.	
		Cancel and exit menu.	
	DELETE VOICE	Press the directional arrows to select other photos with voice attached.	
		Select this icon to delete the voice attached to the photo.	
		Cancel and exit menu.	
	SLIDE SHOW	Interval: 1~60 second(s)	
		Transition: NONE\ RANDOM and etc.	
		START	
	DELETE	ONE	Press the directional arrows to select a photo for deletion.
			Select this icon to delete the selected photo.
			Cancel and exit menu
		ALL	Select this icon to delete all photos.
			Cancel and exit menu.

VIDEO PLAYER MENU

Enter **VIDEO PLAYER** and press **MENU** button. The menu contains the following:

	**VIEW**	LIST \ MULTIPLE \ SINGLE	
	**REPEAT**	OFF	
		 NORMAL: Repeat all the video files from the current selected one for one time.	
		 ONE: Repeat the selected video file continuously.	
		 ALL: Repeat all the video files continuously.	
		 A-B: Repeat the video from point A to point B.	
	**START TIME**	HH: MM: SS	
	**DELETE**	ONE	 Press the directional arrows to select a video for deletion.
			 Select this icon to delete the selected video.
			 Cancel and exit menu.
		ALL	 Select this icon to delete all video files.
			 Cancel and exit menu.

AUDIO PLAYER MENU

Enter **AUDIO PLAYER** and press **MENU** button. The menu contains the following:

▶▶	**PREVIEW**	Play each of the audio files for 5 seconds.	
	REPEAT	NORMAL: Repeat all audio files from the currently selected to the last for one time.	
		ONE: Repeat the selected audio file continuously.	
		ALL: Repeat all the audio files continuously.	
		A-B: Repeat the audio from point A to point B.	
		RANDOM: Repeat the audio in a random order.	
	VOICE ALARM	ON	Set up alarm clock
		OFF	

🗑	**DELETE**	ONE	◀ ▶ Press the directional arrows to select audio for deletion.
			🗑 Select this icon to delete the selected audio.
			↩ Cancel and exit menu.
		ALL	🗑 Select this icon to delete all audio files.
			↩ Cancel and exit menu.

MUSIC PLAYER MENU

Enter **MUSIC PLAYER** and press **MENU** button. The menu contains the following:

▶▶	**PREVIEW**	Play each music file for 5 seconds.

	REPEAT	NORMAL: Repeat all the music files from the current selected one for one time.	
		ONE: Repeat the selected music file continuously.	
		ALL: Repeat all the music files continuously.	
		A-B: Repeat the music from point A to point B.	
		RANDOM: Repeat the music in a random order.	
	ALARM	ON	Set up alarm clock
		OFF	
	DELETE	ONE	Press the directional arrows to select music for deletion.
			Select this icon to delete the selected music.
			Cancel and exit menu.
		ALL	Select this icon to delete all music files.
			Cancel and exit menu.

AV CENTER MENU

Enter **AV CENTER** and press **MENU** button. The menu contains the following:

	TIMER RECORD	ON	QUALITY: SP \ HQ \ LP
			DATE: YY / MM / DD
			START TIME:
			END TIME:
			SAVE
		OFF	
	RECORDING TIME DISPLAY	ELAPSED TIME	
		TIME REMAINING	

FILE BROWSER MENU

Enter FILE BROWSER and press MENU button. The menu contains the following:

<table>
<tr><td rowspan="6"></td><td rowspan="6">SELECT</td><td colspan="2">ALL</td></tr>
<tr><td rowspan="4">TYPE</td><td>PHOTO</td></tr>
<tr><td>VIDEO</td></tr>
<tr><td>AUDIO</td></tr>
<tr><td>MUSIC</td></tr>
<tr><td colspan="2">NONE</td></tr>
<tr><td rowspan="3"></td><td rowspan="3">SORT</td><td colspan="2">BY NAME</td></tr>
<tr><td colspan="2">BY TYPE</td></tr>
<tr><td colspan="2">BY SELECTED</td></tr>
<tr><td rowspan="2"></td><td rowspan="2">COPY&MOVE</td><td colspan="2">COPY TO</td></tr>
<tr><td colspan="2">MOVE TO</td></tr>
</table>

	**DELETE**	ONE	 Select this icon to delete the selected file.
			 Cancel and exit menu.
		SELECTED	 Select this icon to delete all the selected files.
			 Cancel and exit menu.
		UNSELECTED	 Select this icon to delete all the unselected files.
			 Cancel and exit menu.
		ALL	 Select this icon to delete all files.
			 Cancel and exit menu.
	**RENAME**	Highlight the file you want to rename and select this icon to open a character list for renaming.	
	**NEW FOLDER**	Select the icon to create a folder.	

CALENDAR MENU

Enter **CALENDAR** and press **MENU** button. The menu contains the following:

	CALENDAR	MONTH
		WEEK
		DAY
	CLOCK	
	DATE	YY/MM/DD
		SAVE
	TIME	AM/PM HH:MM
		SAVE

SETUP MENU

Enter **SETUP MENU** and press **OK** button to enter. The Setup menu contains the following:

POWER	AUTO STANDBY	30SEC/1MIN/1.5MIN/<u>2MIN</u>/OFF	
	AUTO POWER OFF	1.5MIN/<u>3MIN</u>/5MIN/OFF	
DISPLAY	STARTUP SCRN	<u>ON</u>/OFF	
	DATE/TIME DISPLAY:	DATE/<u>TIME</u>	
	LCD BRIGHTNESS: ◄ ▮▮▮▮ ► Press the directional arrows to adjust the brightness.		
	VIDEO OUTPUT	<u>INTERNAL LCD</u>/EXTERNAL TV **Note:** To return to the internal LCD output from external TV, press button.	
	TV SYSTEM	NTSC/PAL	
SOUND	VOLUME: ◄ ▮▮▮▮ ► Press the directional arrows to adjust the volume.		
	STARTUP SOUND	<u>ON</u>/OFF	
	BUTTON SOUND	<u>ON</u>/OFF	
SYSTEM	LAST MEMORY	<u>ON</u>/OFF	
	DATE FORMAT	<u>YY/MM/DD</u>; MM/DD/YY; DD/MM/YY	
	LANGUAGE: ◄ENGLISH► Press the directional arrows to select other languages.		
	RESTORE DEFAULT	YES/<u>NO</u>	
	FORMAT	<u>CARD</u>/HDD	F Cancel and return.

Specifications

Product Function	1. Digital Video Player, 2. Digital Video Recorder, 3. Digital Voice Recorder, 4. Digital Photo Player, 5. Music Player, 6. USB Pocket Drive; 7. MMC/ SD Card Reader	
Display	3.6” Color TFT LCD	
Hard Disk	40 GB HDD	
Microphone	Built-in	
Speaker	Built-in	
TV System	NTSC / PAL	
DPS Support	Yes	
Interface	AV In / AV Out / Earphone / DC-in / USB 2.0	
Memory Card Slot	MMC / SD	
Hardware Playback File Format	**Video**	ASF Compatible
	Photo	JPEG Compatible
	Audio	WAV Compatible

Specifications

Power Source	**Internal**	Rechargeable Li-ion Battery (Built-in Charger through Power Adapter)
	External	Power Adapter
Mass Storage		Windows 98SE / Me / 2000 / XP ; Mac OS 9.X and 10.1 above
Dimensions		110 x 80 x 30 mm (43.3 x 31.5 x 11.8 inches) (L x W x H)
Weight		310g (0.68 lb)